

Preliminary

User manual

ReliaGATE 10-12

IoT Edge Gateway TI AM335x, LTE Cat 1

Rev. 0-10 — 27 June 2018 — REGATE-10-12-x6_UserMan_EN_0-10 — ENGLISH

Trademarks

All trademarks, registered trademarks, logos, trade names and products names contained in this document are the property of their respective owners.

Intended audience of this document

This document is intended for system integrators: skilled persons with a thorough knowledge in linking together different computing systems and software applications physically or functionally, to operate as a coordinated whole, in compliance with the applicable regulations.

Revision history

Revision	Description	Date
0-10	Preliminary release	27 June 2018

CONTENTS

Trademarks	2
Intended audience of this document	2
Revision history	2
Contents	3
1 Safety instructions	7
1.1 Safety messages used in this document	7
1.1.1 <i>Safety messages for hazards with a high level of risk</i>	7
1.1.2 <i>Safety messages for hazards with a medium level of risk</i>	8
1.1.3 <i>Safety messages for hazards with a low level of risk</i>	8
1.2 Other messages used in this document	8
1.2.1 <i>Instructions on how to use the product effectively and avoid any damage</i>	8
1.3 How to prevent electrostatic discharge	9
1.4 How to safely connect power to the product	9
1.5 Wireless safety information	9
2 How to receive technical assistance	11
2.1 How to ask for technical support	11
2.2 How to send a product for repair	11
3 Conventions used in this document	13
3.1 Conventions used for signal names	13
3.2 Conventions used for signal types	13
4 Getting started	15
5 Product overview	17
5.1 Product description	17
5.2 Intended use and not allowed uses of the product	18
5.2.1 <i>Intended use</i>	18
5.2.2 <i>Not allowed uses</i>	18
5.3 Technical Specifications	19
5.4 CE marking (only for versions: -x1, -x2, -x4, -x6)	21
5.5 WEEE compliance	21
5.6 RoHS compliance	21
5.7 Electromagnetic Compatibility	22
5.7.1 <i>Directive 2014/30/EU (only for version: -x1,)</i>	22
5.7.1.1 Modification statement	22
5.7.2 <i>Directive RED 2014/53/EU (only for versions: -x2, -x4, -x6)</i>	22
5.7.2.1 Modification statement	22
5.7.3 <i>FCC/ISED regulatory notices</i>	22
5.7.3.1 Modification statement	22
5.7.3.2 Interference statement	22
5.7.3.3 RF radiation exposure statement	22
5.7.3.4 FCC Class B digital device notice	23
5.7.3.5 Labeling information	23
5.8 Product labels	23
6 Interfaces Overview	25
6.1 Front side overview	25
6.2 Rear side overview	26
6.2.1 <i>Service Panel interfaces</i>	27

6.3 Right side overview	28
6.4 Left side overview	29
6.5 LED indicators overview	30
7 Interfaces in detail	31
7.1 Wi-Fi and Bluetooth (only for versions: -x2, -x5, -x6, -x7)	31
7.1.1 Wi-Fi specifications	31
7.1.2 Bluetooth specifications	31
7.1.3 BLE specifications	31
7.1.4 Wi-Fi and Bluetooth antennas connectors specifications	32
7.2 Internal cellular (only for versions: -x3, -x4, -x5, -x6, -x7)	33
7.2.1 Internal cellular modem specifications (according to product versions)	33
7.2.2 Internal cellular antennas connectors specifications	34
7.3 The MicroSIM card receptacles	35
7.3.1 How to insert / remove the MicroSIM card	35
7.3.1.1 If you are using the receptacle on the top side of the circuit board	35
7.3.1.2 If you are using the receptacle on the bottom side of the circuit board	36
7.4 Digital I/Os	37
7.4.1 Insulated Digital Inputs	37
7.4.1.1 Electrical specifications	37
7.4.1.2 Electrical schematics	37
7.4.2 Insulated Digital Outputs	38
7.4.2.1 Electrical specifications	38
7.4.2.2 Electrical schematics	38
7.4.3 Digital I/Os connector specifications	38
7.5 COM ports 0 and 1	39
7.5.1 Note for termination resistors (for RS-485 mode only)	39
7.5.2 Note for fail safe resistors (for RS-485 mode only)	39
7.5.2.1 Switches meaning	39
7.5.3 COM connector specifications	40
7.6 CAN ports 0 and 1	41
7.6.1 CAN 0/1 connector specifications	41
7.7 Ethernet ETH 0 and 1	42
7.7.1 Ethernet specifications	42
7.7.2 ETH 0/1 connectors specifications	42
7.8 Host USB ports	43
7.8.1 USB 0/1/2 connectors specifications	43
7.9 Expansion Connector	44
7.9.1 Expansion connector specifications	44
7.10 TTL Serial console	45
7.10.1 TTL Serial console connector specifications	45
7.11 The MicroSD card receptacle	46
7.11.1 How to insert / remove the MicroSD card in the receptacle	46
7.12 RTC (Real Time Clock)	47
7.12.1 The RTC device "/dev/rtc1"	47
7.12.2 The RTC backup battery	47
7.12.2.1 Battery Install / Replacement Instructions	47
7.12.2.2 How to enable / disable the RTC battery	48
7.13 Watchdog	48
7.14 Accelerometer	48
7.15 The Programmable pushbutton	48
8 How to supply power to the product	49
8.1 Power supply specifications	49
8.1.1 Power IN connector and mating connector specifications	49
8.2 How to supply power and turn ON the product	50

8.3 How to turn OFF the product	51
8.4 How to reduce the power consumption of the product	51
8.5 How to perform a hardware reset of the product	51
9 The Software	53
9.1 The Linux OS distribution	53
9.2 The bootloader procedure	53
9.2.1 How to select the MLO source	53
9.2.2 How to set up a correct MicroSD card / eMMC card partition	53
10 How to access interfaces under Linux	55
10.1 How to drive the GPIOs: the GPIO utility	55
10.2 How to determine the Operating System version installed	56
10.3 Memory and storage devices	56
10.4 Wi-Fi and Bluetooth	56
10.5 ReliaCELL (optional)	56
10.6 Modems	57
10.7 CAN ports	58
10.7.1 How to enable the CAN bus 5V	58
10.7.2 How to setup a CAN port	58
10.7.3 How to send/receive a message via a CAN port	58
10.8 COM ports 0 and 1, Console port	59
10.8.1 How to set the RS-232/485 modes	59
10.8.1.1 How to use the ethsetserial utility to configure the COM ports	59
10.8.1.2 How to implement the ioctl in the source code to configure the COM ports	60
10.8.2 How to test a serial port	62
10.9 Digital I/Os	63
10.10 LED indicators	63
10.11 Ignition Sense	63
10.12 Ethernet ports	63
10.13 How to enable the 3.3V and 5V power supply on expansion connector	64
10.14 RTC	65
10.15 Watchdog	66
10.15.1 How to manage the watchdog using the C programming language	66
10.15.2 How to manage the watchdog from the command line	66
10.15.3 For further information	67
10.16 Accelerometer	67
10.17 Internal temperature sensor	68
10.18 The Programmable pushbutton	68
11 How to log in the Administration Console	69
11.1 The default credentials	69
11.2 How to login using the Console port	69
11.3 How to login via Secure Shell (SSH)	69
11.3.1 How to login via the eth0 port	70
11.3.2 How to login via the eth1 port	70
11.4 How to change your security settings	70
12 How to compile custom software for the ReliaGATE 10-12	71
12.1 How to set up the toolchain	71
12.2 How to use the toolchain to compile custom software for the ReliaGATE 10-12	71
13 Eurotech Everyware IoT	73
13.1 Everyware Software Framework (ESF)	73
13.2 The ESF Web UI	74
13.3 The ESF Wires Application	75
13.4 Everyware Cloud (EC)	76

13.5 For further information	76
14 Mechanical specifications	77
14.1 Product mechanical dimensions	77
14.2 Mounting Bracket mechanical dimensions	78
15 How to install the product	79
15.1 Comply with the safety instructions	79
15.2 How to install the product using the Mounting Bracket	79
15.3 How to replace the Mounting Bracket with the DIN Rail Mounting Kit	80
15.4 How to replace the DIN Rail Mounting Kit with the Mounting Bracket	81
15.5 How to install the product on a DIN rail	82
15.6 How to remove the product from a DIN rail	82
15.7 Which screws are used with the Mounting Bracket or the DIN Mounting Kit	83
16 How to maintain the product	85
16.1 How to prevent electrostatic discharge	85
16.2 How to safely remove the power supply	85
16.3 How to verify the installation of the product	85
16.4 How to clean the product	85
Notes	87

Preliminary

1 SAFETY INSTRUCTIONS

IMPORTANT: Read carefully and understand the instructions and warnings contained in this document before installing / using the product. Keep this document for future reference.

To lower the risk of personal injury, electric shock, fire or damage to equipment, observe the instructions and warnings contained in this document.

Failure to comply with the instructions and warnings contained this document, violates the standards of safety, design, manufacture, and intended use of the product.


Eurotech assume no liability for any damage caused by failure to observe the instructions and warnings contained this document.


Whenever you have any doubt regarding the correct understanding of this document, contact the Eurotech Technical Support (for more information see ["How to receive technical assistance" on page 11](#)).

1.1 Safety messages used in this document

1.1.1 Safety messages for hazards with a high level of risk

To indicate a hazard with a high level of risk which, if not avoided, **will result in death or serious injury**, the following safety message is used; the message also contains the safety instructions to follow to avoid any hazard:


 **DANGER**




**TEXT THAT EXPLAINS THE SOURCE OF THE HAZARD
(WRITTEN WITH BOLD UPPER-CASE CHARACTERS)**

**Text with the safety instructions to follow to avoid any hazard
(written with bold lower-case characters)**

Example:

 **DANGER**





**HIGH VOLTAGE INSIDE.
CONTACT WILL CAUSE ELECTRIC SHOCK OR BURN.**

Turn OFF and disconnect power before opening the rack.



1.1.2 Safety messages for hazards with a medium level of risk

To indicate a hazard with a medium level of risk which, if not avoided, **could result in death or serious injury**, the following safety message is used; the message also contains the safety instructions to follow to avoid any hazard:

 WARNING	
 WARNING SIGN	TEXT THAT EXPLAINS THE SOURCE OF THE HAZARD (WRITTEN WITH BOLD UPPER-CASE CHARACTERS)
	Text with the safety instructions to follow to avoid any hazard (written with bold lower-case characters)

1.1.3 Safety messages for hazards with a low level of risk

To indicate a hazard with a low level of risk which, if not avoided, **could result in minor or moderate injury**, the following safety message is used; the message also contains the safety instructions to follow to avoid any hazard:

 CAUTION	
 WARNING SIGN	TEXT THAT EXPLAINS THE SOURCE OF THE HAZARD (WRITTEN WITH BOLD UPPER-CASE CHARACTERS)
	Text with the safety instructions to follow to avoid any hazard (written with bold lower-case characters)

1.2 Other messages used in this document

1.2.1 Instructions on how to use the product effectively and avoid any damage

To indicate:

- Instructions on how to use the product effectively
- Instructions on how to avoid damaging the product or third-party property (not related to personal injury),

the following message is used:

NOTICE	
SIGN if necessary	Text with the instructions to follow to complete the specific task (written with bold characters).

1.3 How to prevent electrostatic discharge

NOTICE



HOW TO PREVENT DAMAGING ELECTROSTATIC-SENSITIVE DEVICES

The symbol on the left is applied on electrostatic-sensitive devices.

To prevent damaging electrostatic-sensitive devices:

- Handle the electrostatic-sensitive devices in an ESD Protected Area (EPA)
- Observe the appropriate antistatic precautions. For example: use a wrist strap kept in constant contact with bare skin and attached to ground.

1.4 How to safely connect power to the product

To safely connect power to the product:

- Observe all the instructions for safety, installation, and operation
- Never operate with wet hands
- Use certified power cables
- Make sure the power cables are not damaged before using them
- Make sure that the power cables meet the power requirements of the devices
- Position cables with care. Do not position cables in places where they may be trampled or compressed by objects placed on them
- Make sure that the power-points and plugs are not damaged before using them
- Do not overload the power-points and plugs
- Use a power supply that meets the requirements stated on the identification label of the product. In case of uncertainties about the required power supply, contact the Eurotech Technical Support Team (for more information see ["How to receive technical assistance" on page 11](#)).

1.5 Wireless safety information

The antennas used in the product have to be installed with care in order to avoid any interference with other electronic devices and to guarantee a minimum distance from the body (20 cm).

In case of this requirement cannot be satisfied, the system integrator has to assess the final product against the SAR regulations.

(This page has been intentionally left blank)

Preliminary

2 HOW TO RECEIVE TECHNICAL ASSISTANCE

2.1 How to ask for technical support

To ask for technical support, complete the following steps

1. Go to the Eurotech Global Support Centre: <https://support.eurotech.com/>
2. Submit a support request
3. Wait for the reply from the Support Team with the information you required

2.2 How to send a product for repair

To send a product for repair, complete the following steps:

1. Go to the Eurotech Global Support Centre: <https://support.eurotech.com/>
2. Submit an RMA request
3. Wait for the reply from the RMA Department. It will contain:
 - The RMA number
 - The shipping information
4. Pack the product adequately using anti-static material and place it in a sturdy box with enough packing material to protect it from shocks and vibrations
5. Ship the product to Eurotech following the information received from the RMA Department.

NOTICE

Any product returned to Eurotech, that is found to be damaged due to inadequate packaging, will not be covered by the warranty.

(This page has been intentionally left blank)

Preliminary

3 CONVENTIONS USED IN THIS DOCUMENT

3.1 Conventions used for signal names

Convention	Description
GND	Ground
#	Active low signal
+	Positive signal; Positive signal in differential pair
-	Negative signal; Negative signal in differential pair
3.3	3.3 V signal level
5	5 V signal level
NC	No Connection
Reserved	Use is reserved to Eurotech

3.2 Conventions used for signal types

Convention	Description
I	Signal is an input to the system
O	Signal is an output from the system
IO	Signal may be input or output
P	Power and Ground
A	Analog signal
NC	No Connection
Reserved	Use is reserved to Eurotech

(This page has been intentionally left blank)

Preliminary

4 GETTING STARTED

To get started with the ReliaGATE 10-12, follow these steps:

1. Know the ReliaGATE 10-12 interfaces.

The ReliaGATE 10-12 provides connectivity to several wired and wireless interfaces.

For further information, see:

- ["Product overview" on page 17](#)
- ["Technical Specifications" on page 19](#)
- ["Interfaces Overview" on page 25](#)
- ["Interfaces in detail" on page 31](#)

2. Supply power to the ReliaGATE 10-12.

Supply power to the ReliaGATE 10-12 correctly, respecting all the safety instructions.

For further information, see ["How to supply power to the product" on page 49](#)

3. Log into the Administration console.

The ReliaGATE 10-12 runs a Linux distribution based on a Yocto framework and supports login via a variety of methods.

For further information, see:

- ["The Software" on page 53](#)
- ["How to log in the Administration Console" on page 69](#)
- ["How to access interfaces under Linux" on page 55](#)

4. Start developing your applications.

The ReliaGATE 10-12 supports ESF, which is an inclusive software framework that puts a middleware layer between the operating system and the OEM application.

For detailed instructions, and sample applications for developing device applications using ESF on Eurotech platforms, see: <http://esf.eurotech.com/docs>.

5. Install the ReliaGATE 10-12.

The ReliaGATE 10-12 is lightweight, compact, and easy to install.

For further information, see:

- ["Mechanical specifications" on page 77](#)
- ["How to install the product" on page 79](#)

6. Maintain the ReliaGATE 10-12.

Periodic maintenance of the ReliaGATE 10-12 ensures greater integrity and reliable operation.

For further information, see:

- ["How to maintain the product" on page 85](#)

(This page has been intentionally left blank)

Preliminary

5 PRODUCT OVERVIEW

5.1 Product description

The ReliaGATE 10-12 is a IoT Edge Gateway that has been designed to deliver LTE connectivity (with 3G fallback) to industrial and lightly rugged applications.

Based on the TI AM335x Cortex-A8 (Sitara) processor family, with 1GB of RAM, 4GB of eMMC and user-accessible MicroSD and dual Micro-SIM slots, the ReliaGATE 10-12 is a low power gateway suitable for demanding use cases: it supports a 6 to 36V power supply with transient protection and ignition sense, two protected RS-232/RS-485 serial ports, two CAN bus interfaces, three noise and surge protected USB ports, and four isolated digital interfaces.

The ReliaGATE 10-12 features a wide range of connectivity capabilities¹: it integrates an internal LTE Cat 1 cellular modem with dual Micro-SIM support, Wi-Fi, Bluetooth, and two Fast Ethernet ports; an optional internal GNSS provides precise geolocation capabilities.

Expansion options include the ReliaCELL 10-20 family, consisting of external, rugged cellular modules for global use that are certified by leading carriers. An expansion connector allows adding extra features with side modules, such as the ReliaLORA 10-12, a LoRa Gateway unit, or the ReliaIO 10-12, which provides analog input and more DI/O ports.

For further details visit www.eurotech.com.

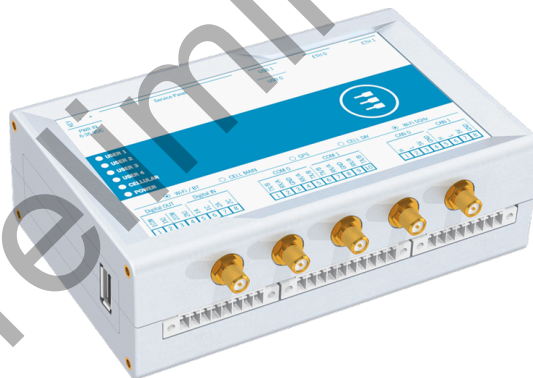


Figure 5.1 - Example of ReliaGATE 10-12, front side

¹The features availability depends on the product versions

5.2 Intended use and not allowed uses of the product

NOTICE

Install this product in a secured location, only accessible to authorized personnel (for example in a cabinet / technical compartment).

Use	
Road transport	No
Rail transport	No
Residential	No
Defence	No
Industrial	Yes

5.2.1 Intended use

The ReliaGATE 10-12 is a IoT Edge Gateway that has been designed to deliver LTE connectivity (with 3G fall-back) to industrial and lightly rugged applications.

The ReliaGATE 10-12 must:

- Be accessible to authorized personnel only
- Be used with appropriate interconnecting and power cables
- Be used with a power supply that meets the requirements stated on the identification label of the product
- Be used indoors only

5.2.2 Not allowed uses

Do not use the ReliaGATE 10-12:

- On-board road vehicles
- On-board rail vehicles
- In residential applications
- In defence applications
- Outdoors
- In environments with potentially explosive atmospheres
- If not installed according to the instructions and warnings contained in this document.

5.3 Technical Specifications

The ReliaGATE 10-12 is available in the following product versions: from -x1 to -x7.

They have the following specifications:

Specifications		Description						
		-x1	-x2	-x3	-x4	-x5	-x6	-x7
Processor	CPU	TI AM3352, 1 GHz, 1 Core						
Memory	RAM	1 GB, DDR3						
Storage	Embedded	4 GB eMMC						
	Other	1x MicroSD slot (user accessible)						
I/O interfaces	Ethernet	2x Fast Ethernet on RJ45 connectors						
	USB	3x Host 2.0 (noise and surge protected) on Type A connectors						
	Serial	2x RS-232/485 (Surge protected, RS-485 termination and fail-safe resistors) 1x TTL Serial Console						
	CAN 2.0B	2x CAN bus with 5V (100mA) Power Out						
	Digital I/O	2x Digital Input: 36 V, 1 kV Optoinsulated 2x Digital Output: 40 V AC/DC, 1 kV Optoinsulated, 500 mA, 1 kHz Max Switching						
	Expansion	Yes, for Side Expansion Modules						
Radio interfaces	Internal Cellular	No		LTE Cat 1 (NA) 3G Fallback	LTE Cat 1 (EU) 2G Fallback	LTE Cat 1 (NA) 3G Fallback	LTE Cat 1 (EU) 2G Fallback	LTE Cat 1 (JP)
	External Cellular	Optional Accessory: ReliaCELL 10-20 (3G/4G)						
	GNSS	Factory Option: Internal (72 channels GPS, Galileo, GLONASS, BeiDou) Optional Accessory: External ReliaCELL 10-20 3G						
	Wi-Fi/BT	No	802.11a,b,g,n/ BLE 4.2	No		802.11a,b,g,n/ BLE 4.2		
	Antennas (external)	No	2x RP-SMA Wi-Fi/BT	2x SMA Cellular		2x SMA Cellular, 2x RP-SMA Wi-Fi/BT		
Other	RTC	Yes (user accessible backup battery)						
	Watchdog	Yes (external)						
	TPM	Factory Option						
	Sensors	Temperature (inside the product), Accelerometer						
	LEDs	1x Power, 1x Cellular, 4x Programmable						
	Buttons	1x Reset, 1x Programmable						
	SIM slot	No		2x Micro-SIM (user accessible)				
Power	Input	6 to 36 V DC with transient protection and Ignition Sense						
	Consumption	2 W typical; 15 W maximum						

(Continued on next page)

(Continued from previous page)

Specifications		Description						
		-x1	-x2	-x3	-x4	-x5	-x6	-x7
Environment	Operating Temperature	-30 to +70 °C						
	Storage Temperature	-40 to +85 °C						
Certifications	Regulatory	FCC, ISED, CE	FCC, ISED	CE	FCC, ISED	CE	JATE, TELEC	
	Safety	EN 62368-1, UL ¹ 60950						
	Environmental	RoHS2; REACH						
	Wi-Fi/BT Radio	No	FCC, ISED, CE	FCC, ISED	CE	FCC, ISED	CE	JATE, TELEC
	Cellular Radio	No	No	FCC, ISED, PTCRB (AT&T, Verizon)	CE	FCC, ISED, PTCRB (AT&T, Verizon)	CE	JATE, TELEC, NTT DoCoMo
	Ingress	IP40 (enclosure only, excluding connectors)						
	MTBF	> 375.000 h (prediction method: IEC 62380 @ 25°C GF)						
Mechanical	Enclosure	Material: ABS- Color: Aluminium						
	Dimensions	139 (L) x 115 (W) x 46 (H); mm - Antennas Connectors and Mounting Bracket included						
	Weight	210 g (without mounting kit/bracket)						
Operating System		Yocto Linux 2.3 - Kernel 4.9.57						

¹UL, NRTL listing Factory Option.

5.4 CE marking (only for versions: -x1, -x2, -x4, -x6)


Some versions of the product described in this document are CE marked; for further information see ["Technical Specifications" on page 19](#).

Eurotech is not responsible for the use of this product together with equipment (for example: power supplies, personal computers, etc.) that are not CE marked and not compliant with the requirements specified in this document.



5.5 WEEE compliance

In compliance with the Directive 2012/19/EU of the European Parliament and of the Council of 4 July 2012 on waste electrical and electronic equipment (WEEE), the symbol on the right, shown on the product or within its literature, indicates separate collection for electrical and electronic equipment (EEE) that has been placed on the market after 2005.

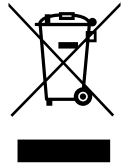

The product described in this document, at the end of its life cycle, must be collected separately and managed in accordance with the provisions of the current Directive on waste of electrical and electronic equipment.

Because of the substances present in the product, improper disposal can cause damage to human health and to the environment.

To avoid any possible legal implications, contact your local waste collection body for full collect and recycling information.

5.6 RoHS compliance

This product, including all its components and its sub-assemblies, have been manufactured in compliance with the Directive 2011/65/EU of the European Parliament and of the Council of 8 June 2011 on the restriction of the use of certain hazardous substances in electrical and electronic equipment.

5.7 Electromagnetic Compatibility

5.7.1 **Directive 2014/30/EU (only for version: -x1,)**

This product meets the requirements of the Directive 2014/30/EU of the European Parliament and of the Council of 26 February 2014 on the harmonization of the laws of the Member States relating to electromagnetic compatibility.

5.7.1.1 **Modification statement**

Eurotech has not approved any changes or modifications to this product by the user. Any changes or modifications could void the user's authority to operate the product.

5.7.2 **Directive RED 2014/53/EU (only for versions: -x2, -x4, -x6)**

This product meets the requirements of the Directive 2014/53/EU of the European Parliament and of the Council of 16 April 2014 on the harmonization of the laws of the Member States relating to the making available on the market of radio equipment.

5.7.2.1 **Modification statement**

Eurotech has not approved any changes or modifications to this product by the user. Any changes or modifications could void the user's authority to operate the product.

5.7.3 **FCC/ISED regulatory notices**

5.7.3.1 **Modification statement**

Eurotech has not approved any changes or modifications to this product by the user. Any changes or modifications could void the user's authority to operate the product.

Eurotech n'approuve aucune modification apportée à l'appareil par l'utilisateur, quelle qu'en soit la nature. Tout changement ou modification peuvent annuler le droit d'utilisation de l'appareil par l'utilisateur.

5.7.3.2 **Interference statement**

This product and its accessories comply with part 15 of FCC rules and Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this product may not cause interference, and (2) this product must accept any interference, including interference that may cause undesired operation of the product.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

5.7.3.3 **RF radiation exposure statement**

This product complies with FCC and ISED radiation exposure limits set forth for an uncontrolled environment. The antenna should be installed and operated with minimum distance of 20 cm between the radiator and your body. Antenna gain must be below:

Cet appareil est conforme aux limites d'exposition aux rayonnements de l'ISED pour un environnement non contrôlé. L'antenne doit être installée de façon à garder une distance minimale de 20 centimètres entre la source de rayonnements et votre corps. Gain de l'antenne doit être ci-dessous:

Antenna types <i>Types d'antenne</i>	Frequency Band <i>Bande de fréquences</i>	Antenna Gain <i>Gain de l'antenne</i>
Cellular	700 MHz 850 MHz 1700 MHz 1900 MHz	6.63 dBi 6.63 dBi 6.00 dBi 9.01 dBi
Wi-Fi / Bluetooth		6 dBi

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

L'émetteur ne doit pas être colocalisé ni fonctionner conjointement avec à autre antenne ou autre émetteur.

5.7.3.4 FCC Class B digital device notice

This product has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this product does cause harmful interference to radio or television reception, which can be determined by turning the product OFF and ON, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the product and the receiver
- Connect the product into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

5.7.3.5 Labeling information

FCC ID: UKMMRG1012

Contains FCC ID: WS2 -WG7833B0

Contains FCC ID: RI7LE910NAV2

ISED: 21442-MRG1012

Contains IC: 5131A-LE910NAV2

5.8 Product labels

The product labels are placed on the underside of the product.

(This page has been intentionally left blank)

Preliminary

6 INTERFACES OVERVIEW

6.1 Front side overview

The front side layout is the following:

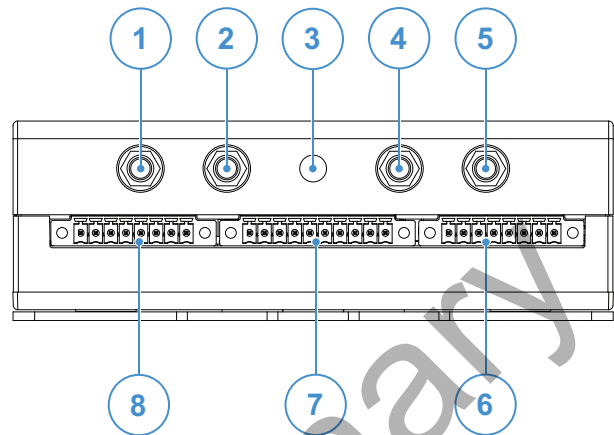


Figure 6.1 - Front panel interfaces layout

Ref#	Description
1	2.4 GHz Wi-Fi / Bluetooth antenna connector (available only for versions: -x2, -x5, -x6, -x7)
2	Internal Main Cellular antenna connector (available only for versions: -x3, -x4, -x5, -x6, -x7)
3	Reserved for factory optional Global Navigation Satellite System (GNSS)
4	Internal Diversity Cellular antenna connector (available only for versions: -x3, -x4, -x5, -x6, -x7)
5	5 GHz Wi-Fi antenna connector (available only for versions: -x2, -x5, -x6, -x7)
6	CAN 0/1 connector
7	COM 0/1 connector
8	Digital I/Os connector

Table 6.1 - Rear panel interfaces description

6.2 Rear side overview

The rear side layout is the following:

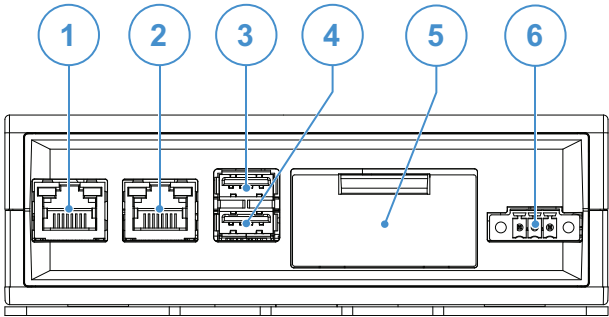


Figure 6.2 - Rear panel interfaces layout

Ref#	Description
1	Ethernet ETH 1 connector
2	Ethernet ETH 0 connector
3	USB 0 connector
4	USB 1 connector
5	Service Panel
6	Power IN connector

Table 6.2 - Rear panel interfaces description

6.2.1 Service Panel interfaces

The interfaces available in the Service Panel are the following:

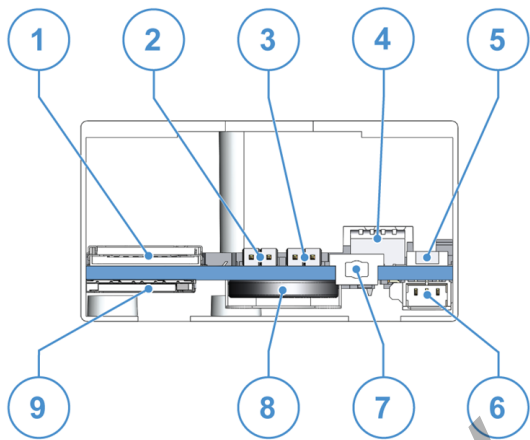


Figure 6.3 - Service Panel interfaces layout

Ref#	Description
1	Combo MicroSD + MicroSIM cards receptacle; pull-lever
2	RTC battery connection jumper
3	Boot selection jumper
4	DIP-switch for serial ports configuration
5	Programmable pushbutton
6	TTL Serial console
7	Hardware reset pushbutton
8	RTC user accessible backup battery
9	MicroSIM card receptacle; push-pull

Table 6.3 - Service Panel interfaces description

6.3 Right side overview

The right side layout is the following:

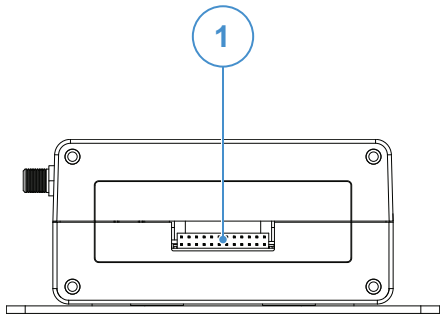


Figure 6.4 - Expansion connector

Ref#	Description
1	Expansion Connector. For further details see: "Expansion Connector" on page 44

Table 6.4 - Expansion connector description

6.4 Left side overview

The left side layout is the following:

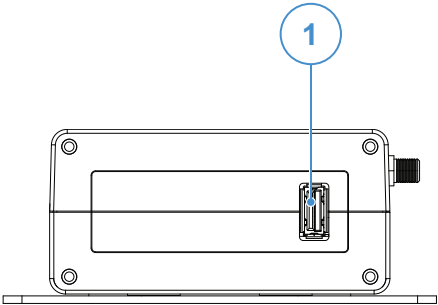


Figure 6.5 - Expansion USB connector layout

Ref#	Description
1	2.0 Host USB connector. This connector is ready for the connection of optional USB accessories (for example ReliaCELL 10-20)

Table 6.5 - Expansion USB connector description

6.5 LED indicators overview

The LED indicators are placed on the bottom side of the product. They are the following:

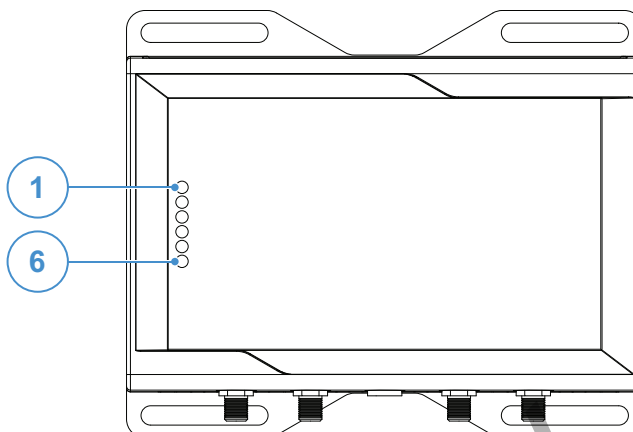


Figure 6.6 - LED indicators layout

Ref#	Use	Color
1	USER1 (General purpose)	Green
2	USER2 (General purpose)	Green
3	USER3 (General purpose)	Amber
4	USER4 (General purpose)	Amber
5	CELL (Modem activity) (available only for versions: -x3, -x4, -x5, -x6, -x7): <ul style="list-style-type: none"> LED ON: Modem ON LED blinking: Modem connected to GSM network 	Green
6	POWER: <ul style="list-style-type: none"> LED ON: Product powered by the external source LED OFF: Product not powered by the external source 	Blue

Table 6.6 - LED indicators description

7 INTERFACES IN DETAIL

7.1 Wi-Fi and Bluetooth (only for versions: -x2, -x5, -x6, -x7)

The ReliaGATE 10-12 provides the following Wi-Fi / Bluetooth functionality:

- 2.5 GHz Wi-Fi 802.11a,b,g,n / BLE 4.2 BLE Bluetooth
- 5 GHz Wi-Fi 802.11a,b,g,n

The internal circuitry allows for 2.5 GHz Wi-Fi and Bluetooth coexistence.

The Wi-Fi and Bluetooth antennas connectors are placed on the front side.

7.1.1 Wi-Fi specifications

- Integrated 2.4 and 5 GHz Power Amplifier (PA) for WLAN solution
- WLAN Baseband Processor and RF transceiver Supporting IEEE Std 802.11a/b/g/n
- WLAN 2.4/5 GHz SISO (20/40 MHz channels)
- 2.4-GHz MRC Support for Extended Range
- 5 GHz Frequencies:
 - U-NII-1 Bands 36, 38, 40, 44, 46, 48
 - U-NII-3 Bands 149, 151, 153, 157, 159, 161, 165
- Baseband Processor:
 - IEEE Std 802.11a/b/g/n data rates and IEEE Std 802.11n data rates with 20 or 40 MHz SISO
- Fully calibrated system. Production calibration not required
- Medium Access Controller (MAC):
 - Embedded ARM™ Central Processing Unit (CPU)
 - Hardware-Based Encryption/Decryption using 64-, 128-, and 256-Bit WEP, TKIP or AES Keys
 - Supports requirements for Wi-Fi Protected Access (WPA and WPA2.0) and IEEE Std 802.11i [includes hardware-accelerated Advanced Encryption Standard (AES)]
 - Designed to work with IEEE Std 802.1x
- IEEE Std 802.11d,e,h,i,k,r PICS compliant
- New advanced co-existence scheme with BT/BLE
- 2.4/5 GHz Radio:
 - Internal LNA and PA
 - Supports: IEEE Std 802.11a, 802.11b, 802.11g and 802.11n
- Supports 4 bit SDIO host interface, including high speed (HS) and V3 modes

7.1.2 Bluetooth specifications

- Supports Bluetooth 4.2
- Includes concurrent operation and built-in coexisting and prioritization handling of Bluetooth, BLE, audio processing and WLAN
- Dedicated Audio processor supporting on chip SBC encoding + A2DP:
 - Assisted A2DP (A3DP) support - SBC encoding implemented internally
 - Assisted WB-Speech (AWBS) support - modified SBC codec implemented internally

7.1.3 BLE specifications


- Fully compliant with BT and BLE dual mode standard
- Support for all roles and role-combinations, mandatory as well as optional
- Supports up to 10 BLE connections
- Independent buffering for LE allows having large number of multiple connections without affecting BR/EDR performance

7.1.4 *Wi-Fi and Bluetooth antennas connectors specifications*

Specifications are the same for both the following antennas connectors:

- 2.4 GHz Wi-Fi / Bluetooth
- 5 GHz Wi-Fi

Connector Layout:

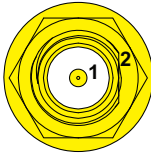

Connector Pinout:

Pin #	Description
1	Male inner pin contact
2	Female connector body (outer thread)

Connector Specifications:

- RP-SMA connector
- Gender: Female

Mating Connector Specifications:

- RP-SMA connector
- Gender: Male

Preliminary

7.2 Internal cellular (only for versions: -x3, -x4, -x5, -x6, -x7)

The ReliaGATE 10-12 provides the following internal cellular functionality:

Version	Functionality
-x3	LTE Cat 1 (NA) 3G Fallback
-x4	LTE Cat 1 (EU) 2G Fallback
-x5	LTE Cat 1 (NA) 3G Fallback
-x6	LTE Cat 1 (EU) 2G Fallback
-x7	LTE Cat 1 (JP)

The cellular antennas connectors are placed on the front side.

7.2.1 Internal cellular modem specifications (according to product versions)

Product features:

- Rx Diversity and MIMO DL 2x2
- LTE FDD Cat. 1, 3GPP release 9 compliant
- SIM application Tool Kit 3GPP TS 51.014
- Serial port multiplexer 3GPP TS27.010
- SMS over IMS
- Built in UDP/TCP/FTP/SMTP stack

LTE Data:

- Uplink up to 5 Mbps
- Downlink up to 10 Mbps

Frequencies:


- 4G bands (MHz)
 - B12/B13(700)
 - B5(850)
 - B4(AWS1700)
 - B2(1900)
 - B1(2100)
 - B3(1800)
 - B7(2600)
 - B8(900)
 - B20(800)
- 3G bands (MHz)
 - B2(1900)
 - B5(850)
- 2G bands (MHz)
 - B3(1800)
 - B7(2600)

7.2.2 Internal cellular antennas connectors specifications

Specifications are the same for both the following antennas connectors:

- Main Cellular
- Diversity Cellular

Connector Layout:

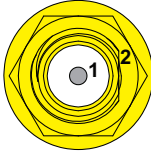

Connector Pinout:

Pin #	Description
1	Female inner pin contact
2	Female connector body (outer thread)

Connector Specifications:

- SMA connector
- Gender: Female

Mating Connector Specifications:

- SMA connector
- Gender: Male

Preliminary

7.3 The MicroSIM card receptacles

The ReliaGATE 10-12 includes the following MicroSIM card receptacles in the Service Panel:

1st MicroSIM card receptacle: Integrated in a Combo MicroSD + MicroSIM cards receptacle (pull-lever) **on the top side** of the circuit board

2nd MicroSIM card receptacle: **On the bottom side** of the circuit board (push-pull)


NOTICE

**TURN THE SIM PIN OFF BEFORE INSERTING THE SIM CARD IN THE RECEPTACLE.
THE CELLULAR CONNECTION WILL NOT WORK IF THE SIM PIN IS ON.**


7.3.1 How to insert / remove the MicroSIM card

7.3.1.1 If you are using the receptacle on the top side of the circuit board

To insert the MicroSIM card, push it in the holder with the contacts facing down, and the cut corner facing inwards:

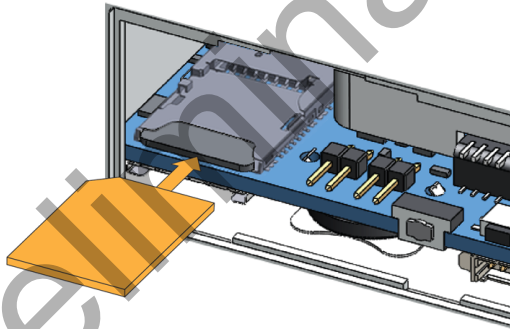


To remove the MicroSIM card, pull the eject lever towards yourself: use a pen tip to simplify the operation:

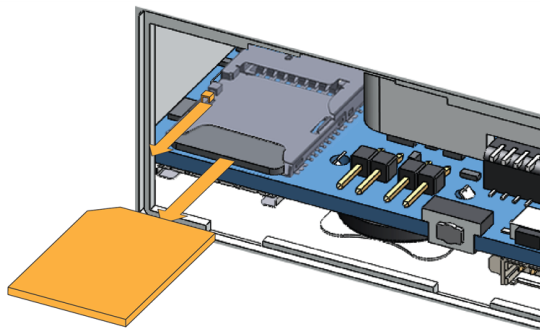

7.3.1.2 If you are using the receptacle on the bottom side of the circuit board

To insert the MicroSIM card, push it in the holder with the contacts facing up, and the cut corner facing inwards.

To remove the MicroSIM card, pull it out from the holder: use a pair of tweezers to simplify the operation.

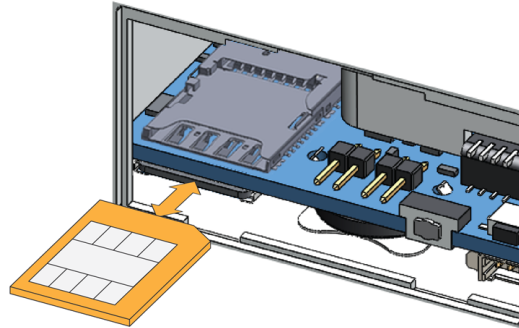

Preliminary

7.4 Digital I/Os

The ReliaGATE 10-12 provides the following Digital I/Os:

- 2x Digital Input: 36 V, 1 kV Optoinsulated
- 2x Digital Output: 40 V AC/DC, 1 kV Optoinsulated, 500 mA, 1 kHz Max Switching

The Digital I/Os connector is available on the front side.

7.4.1 Insulated Digital Inputs


7.4.1.1 Electrical specifications

The table below shows the electrical specifications of the digital inputs:

Characteristic	Value
Logic Zero	$0\text{ V} \leq V_{IN_low} \leq 1\text{ V}$
Logic One	$2\text{ V} \leq V_{IN_high} \leq 36\text{ V}$
Input Current	$< 3.5\text{ mA}$

7.4.1.2 Electrical schematics

The figure below shows the electrical schematics of one digital input:

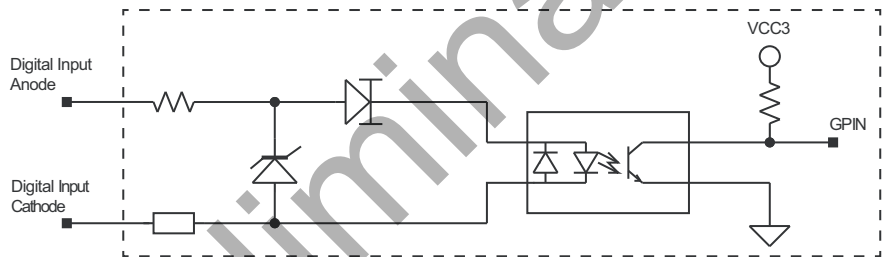

7.4.2 Insulated Digital Outputs


7.4.2.1 Electrical specifications

The table below shows the electrical specifications of the digital outputs:

Characteristic	Value
Maximum Voltage	40 V
Maximum Current	500 mA
Output ON Resistance	Typical: 0.83 Ohm Maximum: 2.50 Ohm
Maximum switching frequency	1 kHz


7.4.2.2 Electrical schematics

The illustration below shows the electrical schematics of one digital output:

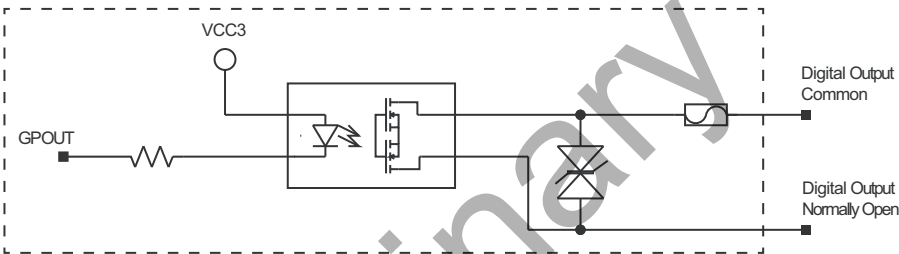

7.4.3 Digital I/Os connector specifications

 Connector Layout:



Connector Specifications:

- Base strip, Header
- Gender: Female
- Type: 8-pin, 3.5 mm pitch

Mating Connector Specifications:

- Pluggable screw terminal block;
- Gender: Male
- Type: 8-pin, 3.5 mm pitch
- Example:
Manufacturer: Phoenix Contact
Part Number: MC 1,5/ 8-STF-3,5 - 1847181
(or equivalent)

Connector Pinout:

Pin #	Signal	Type	Description
1	Digital OUT: 1COM	O	Digital Output 1 Common
2	Digital OUT: 1NO	O	Digital Output 1 Normally Open
3	Digital OUT: 2COM	O	Digital Output 2 Common
4	Digital OUT: 2NO	O	Digital Output 2 Normally Open
5	Digital IN: 1A	I	Digital Input 1 Anode
6	Digital IN: 1C	I	Digital Input 1 Cathode
7	Digital IN: 2A	I	Digital Input 2 Anode
8	Digital IN: 2C	I	Digital Input 2 Cathode

7.5 COM ports 0 and 1

The ReliaGATE 10-12 provides 2x RS-232/485 COM ports:

- COM 0
- COM 1

The COM 0/1 connectors are available on the front side.

COM ports specifications:

- The COM ports are surge protected
- Each port has 2 pairs of pins (each signal is doubled)
- Both COM ports are disabled when the ReliaGATE is initially powered ON
- To set the RS-232/485 modes see ["How to set the RS-232/485 modes" on page 59](#)
- Maximum supported baud rates are:
 - For RS-232 mode: up to 450 kbps
 - For RS-485 mode: up to 1.75 Mbps

7.5.1 Note for termination resistors (for RS-485 mode only)

Each port has 2 pairs of pins (each signal is doubled):


- If the ReliaGATE 10-12 is located at the beginning, or at the end, of a RS-485 chain, spare pair of pins can be used to connect permanently standard axial resistor 120 Ohm, if the application requires that
- If the ReliaGATE 10-12 is not at the beginning or at end of the RS-485 chain, two options are available:
 - Option1: one pair of pins can remain not connected
 - Option2: one pair of pins can be used to connect the previous device of the chain, and the other pair can be used to connect the following device of the chain

7.5.2 Note for fail safe resistors (for RS-485 mode only)

You can use the DIP switch available in the Service Panel to insert the RS-485 fail-safe resistors.

7.5.2.1 Switches meaning

Default DIP switch configuration is OFF; this means no resistors inserted.

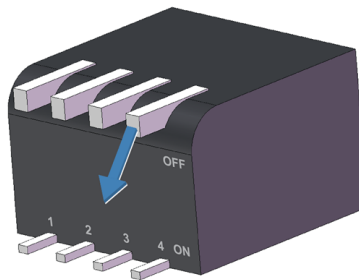

SW#	Signal	Description
1	RS232RX_1 / RS485+_1	ON: 4.7 kΩ pull-up resistor inserted
2	RS232TX_1 / RS485-_1	ON: 4.7 kΩ pull-down resistor inserted
3	RS232RX_2 / RS485+_2	ON: 4.7 kΩ pull-up resistor inserted
4	RS232TX_2 / RS485-_2	ON: 4.7 kΩ pull-down resistor inserted

7.5.3 COM connector specifications

Connector Layout:



Connector Specifications:

- Base strip, Header
- Gender: Male
- Type: 10-pin, 3.5 mm pitch

Mating Connector Specifications:

- Pluggable screw terminal block;
- Gender: Female
- Type: 10-pin, 3.5 mm pitch
- Example:
Manufacturer: Shenzhen Connection Electronics Co., Ltd.
Part Number: MC 1,5/10-STF-3,5 - 1847204
(or equivalent)

Connector Pinout:

Pin #	Signal	Type	Description
1	COM 0: TX/B	O	COM port 0: • RS-232: Transmit Data • RS-485: B Line
2	COM 0: RX/A	I	COM port 0: • RS-232: Receive Data • RS-485: A Line
3	COM 0: GND	P	Ground
4	COM 0: RX/A	I	COM port 0: • RS-232: Receive Data • RS-485: A Line
5	COM 0: TX/B	O	COM port 0: • RS-232: Transmit Data • RS-485: B Line
6	COM 1: TX/B	O	COM port 1: • RS-232: Transmit Data • RS-485: B Line
7	COM 1: RX/A	I	COM port 1: • RS-232: Receive Data • RS-485: A Line
8	COM 1: GND	P	Ground
9	COM 1: RX/A	I	COM port 1: • RS-232: Receive Data • RS-485: A Line
10	COM 1: TX/B	O	COM port 1: • RS-232: Transmit Data • RS-485: B Line

7.6 CAN ports 0 and 1

The ReliaGATE 10-12 provides 2x CAN (Controller Area Network) ports compliant with the CAN Specification 2.0, Parts A and B:

- CAN 0
- CAN 1

 
The CAN 0/1 connectors are available on the front side.

Notes about CAN power supply:

- The ReliaGATE 10-12 can supply power to the 2 CAN ports: 100 mA @ 5V (each port)
- CAN power can be enabled / disabled by software
- The interfaces are surge protected.

7.6.1 CAN 0/1 connector specifications

Connector Layout:



Connector Specifications:

- Base strip, Header
- Gender: Male
- Type: 8-pin, 3.5 mm pitch

Mating Connector Specifications:

- Pluggable screw terminal block;
- Gender: Female
- Type: 8-pin, 3.5 mm pitch
- Example:
Manufacturer: Phoenix Contact
Part Number: MC 1,5/ 8-STF-3,5- 1847181
(or equivalent)

Connector Pinout:

Pin #	Signal	Type	Description
1	CAN 0: H	IO	CAN port 0 Positive Data
2	CAN 0: L	IO	CAN port 0 Negative Data
3	CAN 0: 5V	5	CAN node 0 5 V Output power supply
4	CAN 0: GND	P	Ground
5	CAN 1: H	IO	CAN port 1 Positive Data
6	CAN 1: L	IO	CAN port 1 Negative Data
7	CAN 1: 5V	5	CAN node 1 5 V Output power supply
8	CAN 1: GND	P	Ground

7.7 Ethernet ETH 0 and 1

The ReliaGATE 10-12 provides 2x 10/100 Mbps Ethernet ports for wired network connectivity:

- ETH 0
- ETH 1


The ETH 0/1 connectors are available on the rear side.

7.7.1 Ethernet specifications

Feature	Description
Network Standard	IEEE 802.3u 10/100-BaseTX. IEEE 802.3x full-duplex flow control.
Speeds	10/100-BaseTX interfaces with MAC
Notes	The interfaces are noise and surge protected. The RJ-45 connector has integrated magnetics.

7.7.2 ETH 0/1 connectors specifications

Connector Layout:

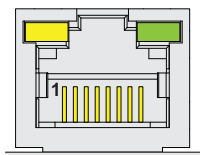

Connector Specifications:

- RJ-45 socket
- Gender: Female

Mating Connector Specifications:

- RJ-45 plug
- Gender: Male

Connector Pinout (pins not listed are not connected):

Pin #	Signal	Type	Description
1	TX+	O	Transmit Data +
2	TX-	O	Transmit Data -
3	RX+	I	Receive Data +
6	RX-	I	Receive Data -

 
7.8 Host USB ports

The ReliaGATE 10-12 provides 3x Host 2.0 USB ports (Noise and Surge Protected) for general purpose applications:

- USB 0 on the front side
- USB 1 on the front side
- USB 2 on the left side. This connector is ready for the connection of optional USB accessories (for example ReliaCELL 10-20)

7.8.1 USB 0/1/2 connectors specifications

Connector Pinout:



Connector Specifications:

- USB Type-A socket
- Gender: Female

Mating Connector Specifications:

- USB Type-A plug
- Gender: Male

Connector Pinout (pins not listed are not connected):

Pin #	Signal	Type	Description
1	VBUS	5	+5V
2	D-	IO	Negative data
3	D+	IO	Positive data
4	DGND	P	Ground

7.9 Expansion Connector

 
The ReliaGATE 10-12 provides an expansion connector for the following:

- Additional USB OTG interface
- I²S Audio interface
- GPIO expansion interface
- I²C interface
- SPI interface

The expansion connector is available on the right side.

7.9.1 Expansion connector specifications

Connector Layout:



Connector Specifications:

- SQT Socket
- Gender: Female
- Type: 12*2-pin; 2.0 mm pitch

Mating Connector Specifications:

- Samtec MTMM Housing
- Gender: Male
- Type: 12*2-pin; 2.0 mm pitch
- Example:
Manufacturer: Samtec
Part Number: MTMM-112-07-L-D-3
(or equivalent)

Connector Pinout:

Pin #	Signal	Type	Description
1	3V3	P	3.3V/100mA max power supply
2	GND	P	Ground
3	5V	P	5V/1A max power supply
4	USB: EXP+	IO	USB data positive
5	USB: EXP-	IO	USB data negative
6	GND	P	Ground
7	MCASP0: FSX	IO	I2S audio or GPIO
8	MCASP0: AXR0	IO	I2S audio or GPIO
9	MCASP0: ACLKX	IO	I2S audio or GPIO
10	MCASP0: AXR1	IO	I2S audio or GPIO
11	GND	P	Ground
12	Reserved	-	Reserved
13	Reserved	-	Reserved
14	USB: OTG	I	OTG detect or GPIO
15	GPIO: EXP_2	O	3.3V OUT enable (status)
16	GPIO: EXP_1	O	5V OUT enable (status)
17	GND	P	Ground
18	SPI: D1	I	SPI Data IN or GPIO
19	SPI: CS0	O	SPI Chip select or GPIO
20	SPI: D0	O	SPI Data OUT or GPIO
21	SPI: SCLK	O	SPI Clock or GPIO
22	GND	P	Ground
23	I2C: SDA	IO	I2C Data
24	I2C: SCL	O	I2C Clock

7.10 TTL Serial console

 
The ReliaGATE 10-12 provides a 3.3 V TTL compatible Serial console port in the Service Panel.

The voltage levels are the following:

- Log 1 (Hi): 2.0 to 3.3 V
- Log 0 (Low): 0 to 0.8 V

7.10.1 TTL Serial console connector specifications

Connector Layout:



Connector Specifications:

- Shrouded header
- Gender: Male
- Type: Pitch 1.25 mm; 3-pin

Mating Connector Specifications:

- Receptacle Housing
- Gender: Female
- Type: 3-pin, 1.25 mm pitch
- Example:
Manufacturer: Molex
Part Number: 51021-0300
(or equivalent)

Connector Pinout:

Pin #	Signal	Type	Description
1	GND	P	Ground
2	TX	O	Transmit Data
3	RX	I	Receive Data

7.11 The MicroSD card receptacle


The ReliaGATE 10-12 includes a MicroSD card receptacle in the Service Panel.

It is integrated in a Combo MicroSD + MicroSIM cards receptacle (pull-lever) **on the top side** of the circuit board.

7.11.1 *How to insert / remove the MicroSD card in the receptacle*

To insert the MicroSD card, push it in the holder with the contacts facing down.

To remove the Micro SD card, pull it out from the holder. Use your little finger or a pair of tweezers to simplify the operation.

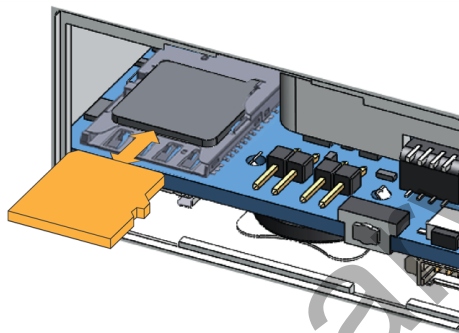

7.12 RTC (Real Time Clock)

The ReliaGATE 10-12 includes the following two RTC (Real Time Clocks) devices:

RTC device	Description	Use
<code>/dev/rtc0</code>	<ul style="list-style-type: none">Internal (in the CPU SoC)	Reserved
<code>/dev/rtc1</code>	<ul style="list-style-type: none">External (I2C-based RTC device)Default RTC used by LinuxAccuracy: 25 minutes per year (at 25 °C)	Wake up the ReliaGATE 10-12 from a deep low power state


7.12.1 The RTC device `"/dev/rtc1"`

The RTC device `"/dev/rtc1"` offers three timestamp registers.

7.12.2 The RTC backup battery

The ReliaGATE 10-12 includes a BR1225 lithium coin cell RTC battery in the Service Panel.


7.12.2.1 Battery Install / Replacement Instructions

**CAUTION**

RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE.
REPLACE THE BATTERY WITH THE SAME TYPE.
DISPOSE OF USED BATTERIES ACCORDING TO MANUFACTURER'S INSTRUCTIONS.

To install (or replace) a battery, complete the following steps:

1. Disconnect the power cable from the product
2. Remove the old battery: use a pair of plastic tweezers to pull out the battery. Dispose of it properly
3. Insert a new battery with the minus “-” pole facing up.

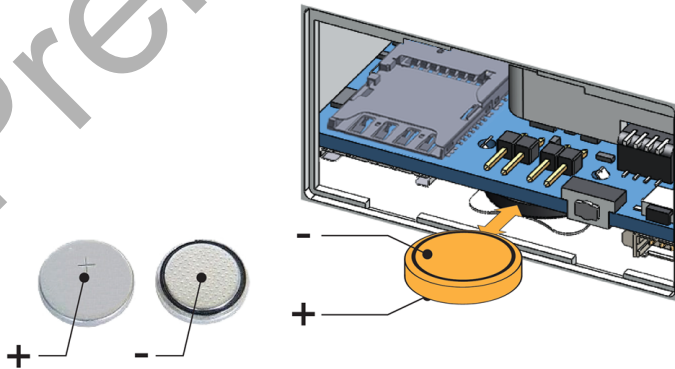


7.12.2.2 How to enable / disable the RTC battery

The ReliaGATE 10-12 includes an RTC battery jumper in the Service Panel.

You can use the RTC battery jumper to enable / disable the RTC battery (this can be useful for example when the ReliaGATE 10-12 is stored in the warehouse to save RTC battery charge):

- Jumper inserted = Battery connected
- Jumper removed = Battery not connected

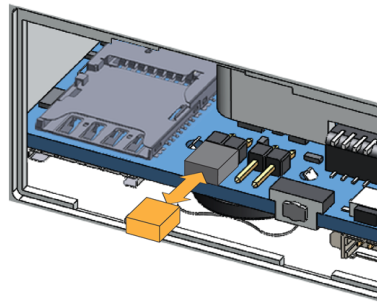

7.13 Watchdog

The ReliaGATE 10-12 includes a watchdog / supervisor IC, external to the CPU.


7.14 Accelerometer

Your ReliaGATE 10-12 includes a 3-axis +/- 8g accelerometer with 12 bit resolution and a programmable output signal which can trigger an interrupt to the CPU (movement detection).

7.15 The Programmable pushbutton

A programmable pushbutton is available in the Service Panel.

The pushbutton is sensed by a Linux daemon which executes a shell script every time the button is either pushed or released.

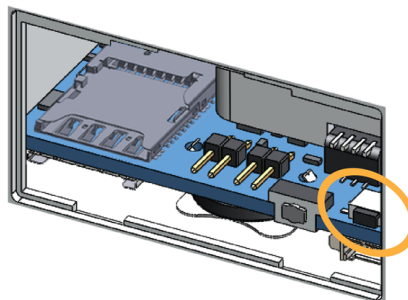

8 HOW TO SUPPLY POWER TO THE PRODUCT

8.1 Power supply specifications

Power supply	6 to 36 V DC with transient protection and Ignition Sense
Power consumption	2 W typical; 15 W maximum
Peak demand	< 15 W

8.1.1 Power IN connector and mating connector specifications

The power input is protected against: surge, noise, reverse polarity, over-voltage.

NOTICE

The Power IN connector is NOT protected against short circuit.
Always include an external fuse to protect the product!

The ReliaGATE 10-12 provides the power supply input port on the rear panel.

Connector Layout:



Connector Specifications:

- Base strip, Header
- Gender: Male
- Type: 3-pin, 3.5 mm pitch

Mating Connector Specifications:

- Pluggable screw terminal block
- Gender: Female
- Type: 3-pin, 3.5 mm pitch
- Example:
Manufacturer: Phoenix Contact
Part Number: MC 1,5/ 3-STF-3,5 - 1847068
(or equivalent)

Connector Pinout:

Pin #	Signal	Type	Description
1	Power IN +	P	Positive power supply input
2	Power IN -	P	Negative power supply input
3	KEY	P	Ignition Sense

8.2 How to supply power and turn ON the product



WARNING

ELECTRIC SHOCK HAZARD


Failure to supply power correctly, or failure to follow all operating instructions correctly, may create an electric shock hazard, which could result in personal injury or loss of life, and / or damage to equipment or other property.

To avoid injuries:

- Do not perform any connections with wet hands
- Check any power cords for damage before using them
- Use certified power cables. The power cables must meet the power requirements of the devices
- Position cables with care. Avoid positioning cables in places where they may be trampled or compressed by objects placed on them
- Take particular care of plugs, power-points and outlets. Avoid overcharging them
- Before applying power, thoroughly review all installation, operation, and safety instructions
- Before operating any equipment, carefully read any supplied instructions
- Always disconnect power and discharge the circuits before touching them
- Only start the product with a power supply that meets the requirements stated on the voltage label. In case of uncertainties about the required power supply, contact the Eurotech Technical Support Team (see the back cover for full contact details) or the electricity authority.

To supply power to the ReliaGATE 10-12, complete the following steps:

1. Set up a DC power source that meets the ReliaGATE 10-12 power requirements
2. **Always include a T3. 15A 65 Vdc external fuse in the power supply circuit to protect the ReliaGATE 10-12**
3. Check the input voltage as close as possible to the Power IN connector. This is to compensate for any cable losses, caused by cable length and other cable characteristics
4. Turn ON the DC power source to supply power to Pins 1 and 2. The ReliaGATE 10-12 automatically turns ON and the LED 6 (POWER) turns ON.

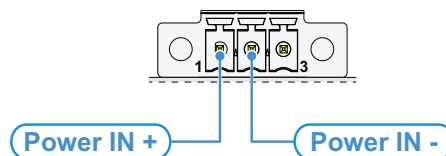

Note about the Ignition Sense

The Ignition Sense is a digital input that can be used to monitor the ignition status.

The ReliaGATE 10-12 turns ON independently of the status of the Ignition Sense (for further information see ["Ignition Sense" on page 63](#)).

8.3 How to turn OFF the product

To turn the ReliaGATE 10-12 OFF follow these steps:


1. Login the Administration console and run the shutdown command. The system turns itself OFF
2. Remove power from pins 1 and 2.

8.4 How to reduce the power consumption of the product

To reduce the power consumption of the ReliaGATE 10-12, turn OFF the radio interfaces and disable unnecessary services that contribute to overall system power consumption.

8.5 How to perform a hardware reset of the product

To trigger a hardware reset of the ReliaGATE 10-12 push the reset pushbutton available in the Service Panel.

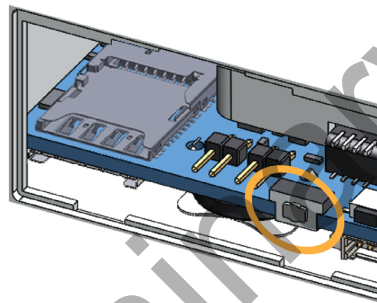

(This page has been intentionally left blank)

Preliminary

9 THE SOFTWARE

9.1 The Linux OS distribution

Eurotech can provide a Linux operating systems based on Yocto framework (www.yoctoproject.org) as well as an SDK for application development.

All the documentation for the developer is available from: www.yoctoproject.org/documentation.

9.2 The bootloader procedure


The bootloader procedure is the following:

1. The MLO file is loaded from either the external MicroSD card or the on-board eMMC memory, and saved in the on-chip memory to configure the RAM memory for use
2. The uboot.img file is loaded (from the same device where MLO was loaded from), saved in the RAM memory, and executed
3. The bootloader searches for a valid operating system. The search order is:
 - a. MicroSD card
 - b. eMMC
4. The bootloader fetches a FIT image which includes the kernel and device tree. The FIT image includes image signatures which are verified before boot

9.2.1 How to select the MLO source

The MLO file can be loaded from either the external MicroSD card or the on-board eMMC memory, according to the setting of the Boot selection jumper (JP2):

- JP2 inserted = Boot from Micro-SD
- JP2 removed = Boot from eMMC

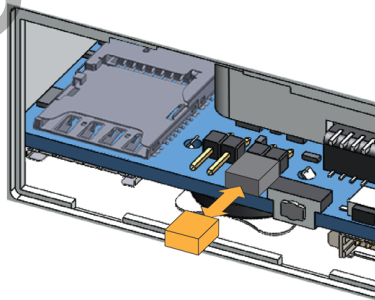

9.2.2 How to set up a correct MicroSD card / eMMC card partition

For a valid boot, the MicroSD card and the eMMC memory must be configured with at least these 2 partitions:

- 1st partition:
 - Type: FAT16
 - Flags: lba, boot
 - Contains the files: MLO and uboot.img
- 2nd partition:
 - Type: ext4
 - Contains the operating system, including the Linux kernel FIT image

(This page has been intentionally left blank)

Preliminary

10 HOW TO ACCESS INTERFACES UNDER LINUX

Interfaces availability depend on the product version.

NOTICE

If Everyware Software Framework (ESF) is installed, it will manage the network interfaces, cellular modem, Bluetooth adapter and GPIOs.

Any changes you make to the Linux configuration files may be overwritten if the related service is managed by ESF.

Refer to the ESF documentation for further details.

10.1 How to drive the GPIOs: the GPIO utility

Several ReliaGATE 10-12 interfaces are controlled by their GPIO. To manage these interfaces, you will need to control the relevant GPIO pin.

To drive a GPIO, use the GPIO utility: `gpio_utility`.

`gpio_utility` allows you to:

- Read / Write a GPIO status
- Set a GPIO as input or output
- Unexport a GPIO.

The GPIOs are exported by default at startup.

To read the GPIO status (for example: the status of LED 1), enter the following command:

```
gpio_utility gpio117
```

The output is the following:

- If LED 1 is ON, then `gpio117 = 1`
- If LED 1 is OFF, then `gpio117 = 0`

To set the GPIO status (for example: the status of LED 1), enter the following commands:

```
#turn led on
gpio_utility gpio117 1

#turn led off
gpio_utility gpio117 0
```

10.2 How to determine the Operating System version installed

To determine the Operating System version installed, enter the following command:

```
eurotech_versions
```

Example output:

```
eth_name_bsp: xxx
eth_vers_bsp: Operating System version
eth_partno_bsp: unknown
eth_serial_number: xxx
eth_model: xxx
eth_partno_epr: unknown
```

10.3 Memory and storage devices

The ReliaGATE 10-12 exposes the memory and the storage devices as follows:

- Internal flash memory: /dev/mmcblk0
- MicroSD card memory: /dev/mmcblk1

10.4 Wi-Fi and Bluetooth

The ReliaGATE 10-12 exposes the Wi-Fi and Bluetooth interfaces as follows:

- Wi-Fi interface: wlan0
- Bluetooth interface: hci0

The ReliaGATE 10-12 exposes the power supply of the Bluetooth as follows:

- /sys/class/gpio/gpio22/value

To manage this GPIO, see ["How to drive the GPIOs: the GPIO utility" on the previous page](#).

NOTES:

- Turning the Bluetooth OFF and ON, does not automatically restart the daemon
- Wi-Fi power control is handled by the driver and is not user accessible.

10.5 ReliaCELL (optional)

The ReliaGATE 10-12 exposes the power supply for the ReliaCELL as follows:

- /sys/class/gpio/gpio73/value

To manage this GPIO, see ["How to drive the GPIOs: the GPIO utility" on the previous page](#).

10.6 Modems

To set up and control the modem, use the `/usr/bin/telit-he910` script (there are sequencing and timing requirements that must be adhered to in order to effectively control the modem).

To obtain the help of the script, enter the following command:

```
telit-he910 help
```

Example output:

```
Usage: telit-he910 command [command_arg]
  help                - Display this messages.
  gpio_init           - Setup the gpio for the ON_OFF* signal.
  gpio_toggle         - Toggle the ON_OFF* signal to turn modem on or off.
  turn_off            - Turn the modem off.
  turn_on             - Turn the modem on.
  is_on               - Check whether the modem is on. Returns status as both text and in
                        the exit status.
  restore_defaults    - Set the modem NVM to the product defaults.
  get_info            - Return details about the modem and possibly the SIM.
  chat at_command     - Send AT-command to the modem and print its response.
  detect_sim          - Force detection of the SIM, if inserted.
  is_sim_present       - Check whether the SIM was detected. Returns status as both text
                        and in the exit status.
  is_sim_registered   - Check whether the SIM is registered to either a home or roaming
                        network. Returns status as both text and in the exit status
```

NOTICE

The script above is designed to work for `telit-he910` or `telit-le910` modems.

10.7 CAN ports

The ReliaGATE 10-12 exposes the CAN ports as follows:

- CAN 0 port: can0
- CAN 1 port: can1

CAN ports are added through the SocketCAN kernel extension.

For further information on SocketCAN refer to the Linux kernel documentation:

www.kernel.org/doc/Documentation/networking/can.txt

10.7.1 How to enable the CAN bus 5V

To enable can0 5V, enter the following command:

```
gpio_utility gpio8 1
```

To enable can1 5V, enter the following command:

```
gpio_utility gpio9 1
```

10.7.2 How to setup a CAN port

To setup a CAN port, enter the following commands:

```
#Set CAN0 to work at 125 kbps
ip link set can0 type can bitrate 125000

#Open the connection
ip link set up can0
```

10.7.3 How to send/receive a message via a CAN port

Example: Sending/receiving a message via a CAN port (once the CAN port has been setup)

```
#Send a byte via CAN0
cansend can0 255

#Example of received message on can0
root@productname...:~# candump can0
interface = can0, family = 29, type = 3, proto = 1
<0x001> [1] 01
<0x001> [1] 02
<0x001> [1] 05
<0x001> [1] 00
<0x001> [1] ff
```

10.8 COM ports 0 and 1, Console port

The ReliaGATE 10-12 exposes the COM ports as follows:

- COM port 0: `/dev/ttyS4` (available on the front panel)
- COM port 1: `/dev/ttyS3` (available on the front panel)
- Console port `/dev/ttyS0` (available in the Service Panel)

You need to configure the serial ports mode before they will work.

10.8.1 How to set the RS-232/485 modes

You can configure the serial port mode in the following ways, A or B:

- A. Using the **ethsetserial** utility
- B. Implementing the **ioctl** in the source code

10.8.1.1 How to use the ethsetserial utility to configure the COM ports

To set COM port 1 to RS-232 mode, enter the following command:

```
ethsetserial -p ttyO3 -m232
```

To set COM port 1 to RS-485 mode, enter the following command:

```
ethsetserial -p ttyO3 -m485
```

To see all the available options, enter the following command:

```
ethsetserial -h
```

10.8.1.2 How to implement the ioctl in the source code to configure the COM ports

To implement the ioctl in the source code, enter the following commands:

```
/*Ioctl to read */
#define TIOCGRS485                                0x542E

/*Ioctl to write */
#define TIOCSRS485                                0x542F
```

Definition of the flags bit

```
/*FLAGS */
//define SER_RS485_ENABLED                        (1 << 0)

/* Logical level for RTS pin when sending */
//define SER_RS485_RTS_ON_SEND                    (1 << 1)

/* Logical level for RTS pin after sent*/
//define SER_RS485_RTS_AFTER_SEND                 (1 << 2)
//define SER_RS485_RX_DURING_TX                   (1 << 4)

/* Inverted logic level for RS485 gpio */
#define SER_RS485_INVERT                          (1 << 5)

/* if enabled serial line drivers must be configured in HiZ*/
#define SER_HIZ_ENABLED                           (1 << 31)
```

Linux kernel data structure

```
struct serial_rs485 {
    __u32  flags;                                /* RS485 feature flags */
    __u32  delay_rts_before_send;                /* Delay before send (milliseconds) */
    __u32  delay_rts_after_send;                 /* Delay after send (milliseconds) */
    __u32  padding[5];                           /* Memory is cheap, new structs */
};
```

Example: Configuring a serial port in RS-232 mode

ser_port_name can be either /dev/ttyO3 or /dev/ttyO4.

```
struct serial_rs485 rs485conf;
unsigned int rs_mode_mask=(SER_HIZ_ENABLED|SER_RS485_ENABLED|SER_RS485_
INVERT|SER_RS485_RTS_ON_SEND|SER_RS485_RTS_AFTER_SEND);

unsigned int set_flags=0;
unsigned int set_flags_mask=rs_mode_mask;

int fd;
fd=open (ser_port_name,O_RDWR);
if (fd==-1)
{
/* process the error */
...
}

/* get serial port configuration */
if (ioctl (fd, TIOCGRS485, & rs485conf) < 0)
{
/* process the error */
...
}

rs485conf.flags&=~ set_flags_mask;
set_flags&=set_flags_mask;
rs485conf.flags|= set_flags;

/*set delay but not used in rs232 mode */
rs485conf.delay_rts_after_send=<delay after send in ms>;
rs485conf.delay_rts_before_send=<delay before send in ms>;

/* apply changes */
if (ioctl (fd, TIOCSR485, & rs485conf) < 0)
{
/* process the error */
...
}
close(fd);
```

Example: Configuring a serial port in RS-485 mode

`ser_port_name` can be either `/dev/ttyO3` or `/dev/ttyO4`.

```

struct serial_rs485 rs485conf;
unsigned int rs_mode_mask=(SER_HIZ_ENABLED|SER_RS485_ENABLED|SER_RS485_
INVERT|SER_RS485_RTS_ON_SEND|SER_RS485_RTS_AFTER_SEND);

unsigned int set_flags=(SER_RS485_INVERT|SER_RS485_ENABLED|SER_RS485_RTS_ON_
SEND);
unsigned int set_flags_mask=rs_mode_mask;

int fd;
fd=open(ser_port_name,O_RDWR);
if (fd==-1)
{
/* process the error */
...
}

/* get serial port configuration */
if (ioctl1 (fd, TIOCGRS485, & rs485conf) < 0)
{
/* process the error */
...
}

rs485conf.flags&=~ set_flags_mask;
set_flags&=set_flags_mask;
rs485conf.flags|= set_flags;

/*set delays */
rs485conf.delay_rts_after_send=<delay after send in ms>;
rs485conf.delay_rts_before_send=<delay before send in ms>;

/* apply changes */
if (ioctl1 (fd, TIOCSR485, & rs485conf) < 0)
{
/* process the error */
...
}
close(fd);

```

10.8.2 How to test a serial port

To test the serial port, use the microcom utility:

```

#connect ttyO3 with a baud rate of 9600
microcom /dev/ttyO3 -s 9600

```

The microcom utility:

- Allows you to transmit / receive data to / from the serial port
- Does not include a local echo (you cannot see the data sent).

10.9 Digital I/Os

The ReliaGATE 10-12 exposes the Digital I/Os (GPIOs) as follows:

- Digital Input 1: `/sys/class/gpio/gpio87/value`
- Digital Input 2: `/sys/class/gpio/gpio89/value`
- Digital Output 1: `/sys/class/gpio/gpio26/value`
- Digital Output 2: `/sys/class/gpio/gpio27/value`

To manage these GPIOs, see ["How to drive the GPIOs: the GPIO utility" on page 55](#).

10.10 LED indicators

The ReliaGATE 10-12 exposes the LED indicators as follows:

- LED 1 (green): `/sys/class/gpio/gpio117/value`
- LED 2 (green): `/sys/class/gpio/gpio114/value`
- LED 3 (amber): `/sys/class/gpio/gpio115/value`
- LED 4 (amber): `/sys/class/gpio/gpio116/value`
- LED 5 (green): Reserved
- LED 6 (blue): Reserved

To manage these GPIOs, see ["How to drive the GPIOs: the GPIO utility" on page 55](#).

10.11 Ignition Sense

The ReliaGATE 10-12 is provided with a Ignition Sense on the Power supply connector (Pin# 3: KEY).

The Ignition Sense is a digital input that can be used to monitor the ignition status

To read the Ignition Sense status, enter the following command:

```
gpio_utility gpio30
```

The output is the following:

- If Pin# 3 is not connected, or connected to GND, then `value = 1`
- If Pin# 3 is connected to Power IN +, then `value = 0`.

10.12 Ethernet ports

The ReliaGATE 10-12 exposes Ethernet ports as follows:

- Ethernet 0 port: `eth0`
- Ethernet 1 port: `eth1`

10.13 How to enable the 3.3V and 5V power supply on expansion connector

3.3V and 5V are OFF by default and are controlled driving specific GPIO's.

To control the 3.3V, enter the following commands:

```
#turn on 3.3V
gpio_utility gpio71 1

#turn off 3.3V
gpio_utility gpio71 0
```

To control the 5V, enter the following commands:

```
#turn on 5V
gpio_utility gpio70 1

#turn off 5V
gpio_utility gpio70 0
```

NOTICE

While the default kernel DTB allows access to these power control pins, depending on the device tree used, control of these power supplies is handled by the kernel and therefore it may not be possible to control them from user space.

10.14 RTC

The ReliaGATE 10-12 exposes the RTC as follows:

- RTC: /dev/rtc1

/dev/rtc1 offers three read-only timestamp registers:

Timestamp register	What it contains
sys/class/rtc/rtc1/device/timestamp1	Reserved data
sys/class/rtc/rtc1/device/timestamp2	The timestamp that the system last lost power (only if a successful initialization has been achieved)
sys/class/rtc/rtc1/device/timestamp3	The timestamp that the system last has been powered (only if a successful initialization has been achieved)

To read a timestamp (for example: timestamp2), enter the following command:

```
cat /sys/class/rtc/rtc1/device/timestamp2
```

10.15 Watchdog

The ReliaGATE 10-12 exposes the watchdog as follows:

- Watchdog: /dev/watchdog1

10.15.1 How to manage the watchdog using the C programming language

To manage the watchdog using the C programming language enter the following commands:

```
Int interval;
Int bootstatus;
Long value;

/* display current watchdog value */
If (ioctl(fd,WDIOC_GETTIMEOUT,&interval)==0)
{
    // interval contains current timeout in seconds
}

/* Check if last boot is caused by watchdog */
If (ioctl(fd,WDIOC_GETBOOTSTATUS,&bootstatus)==0)
{
    //bootstatus <> 0 Watchdog
    //bootstatus = 0 Power-on reset
}

/* set the watchdog value (for example: 30 seconds) */
value=30;
If (ioctl(fd,WDIOC_SETTIMEOUT,&value)==0)
{
    //Watchdog has been set to value content
}

/* stop the watchdog */
write(fd,"V",1);

/* feed the watchdog */
ioctl(fd,WDIOC_KEEPAIVE,0);
```

10.15.2 How to manage the watchdog from the command line

To set the watchdog value (for example: 30 seconds), enter the following command:

```
wdt_setup -d /dev/watchdog1 -t 30
```

To start and feed the watchdog, enter the following command:

```
echo 1 > /dev/watchdog1
```

To stop the watchdog, enter the following command:

```
echo V > /dev/watchdog1
```

10.15.3 For further information

For further information on Linux support for watchdog, see:

www.kernel.org/doc/Documentation/watchdog/watchdog-api.txt

10.16 Accelerometer

The ReliaGATE 10-12 is provided with an accelerometer sensor.

To print the information from the accelerometer, including an update every time movement is detected, use the following command:

```
evtest /dev/input/event0
```

Example output:

```
Input driver version is 1.0.1
Input device ID: bus 0x18 vendor 0x0 product 0x159 version 0x0
Input device name: "ADXL34x accelerometer"
Supported events:
Event type 0 (Sync)
Event type 1 (Key)
Event code 330 (Touch)
Event type 3 (Absolute)
Event code 0 (X)
Value 0
Min -4096
Max 4096
Fuzz 3
Flat 3
Event code 1 (Y)
Value -8
Min -4096
Max 4096
Fuzz 3
Flat 3
Event code 2 (Z)
Value -262
Min -4096
Max 4096
Fuzz 3
Flat 3
Testing ... (interrupt to exit)
Event: time 1325419699.822493, type 3 (Absolute), code 2 (Z), value -254
Event: time 1325419699.822493, ----- Report Sync -----
Event: time 1325419699.863461, type 3 (Absolute), code 2 (Z), value -263
Event: time 1325419699.863461, ----- Report Sync -----
Event: time 1325419699.904445, type 3 (Absolute), code 2 (Z), value -265
Event: time 1325419699.904445, ----- Report Sync -----
Event: time 1325419699.945433, type 3 (Absolute), code 2 (Z), value -263
Event: time 1325419699.945433, ----- Report Sync -----
Event: time 1325419700.109388, type 3 (Absolute), code 2 (Z), value -264
Event: time 1325419700.109388, ----- Report Sync -----
Event: time 1325419700.232362, type 3 (Absolute), code 2 (Z), value -263
Event: time 1325419700.232362, ----- Report Sync -----
```

10.17 Internal temperature sensor

The ReliaGATE 10-12 is provided with a sensor that measures the temperature inside the product.

To read the internal temperature, enter the following command:

```
cat /sys/class/hwmon/hwmon0/temp1_input
```

10.18 The Programmable pushbutton

The programmable pushbutton is sensed by a Linux daemon which executes a shell script every time the button is either pushed or released. This script is located at `/usr/bin/switch_script.sh` and can be customized according to the needs of the user.

To see the pushbutton status, enter the following command:

```
gpio_utility gpio74
```

The output is the following:

- If the button is being pushed, then `value = 0`
- If the button is not being pushed, then `value = 1`.

11 HOW TO LOG IN THE ADMINISTRATION CONSOLE

This section describes how to enter the Administration Console to access the ReliaGATE 10-12 Linux Operating System.

To login the Administration Console, use one of the following methods:

- Direct login via Console Port
- Remote login via Secure Shell (SSH)

11.1 The default credentials

The default credentials are the following (case sensitive):

- Username: **root**
- Password: **eurotech**

11.2 How to login using the Console port

To log in using the Console port, complete the following steps:

1. Connect the USB-to-Serial cable adapter¹ between your development PC and the Console connector of the ReliaGATE 10-12
2. Start a terminal emulator program on your development PC (for example TeraTerm on Windows, Minicom on Linux). Configure the serial port connection for: 115200, 8 bits, 1 stop bit, no parity, and no flow control
3. At the Linux prompt, enter your credentials (see ["The default credentials" above](#)).

You will obtain a video output like the following:

```
root
Password:
root@productname...:~#
```

11.3 How to login via Secure Shell (SSH)

The default (out-of-the-box) network configuration of your ReliaGATE 10-12 is as follows:

- **eth0**
 - Status: Enabled for LAN
 - Configure: Manually (Static IP)
 - IP Address: 172.16.0.1
 - Subnet Mask: 255.255.255.0
 - DHCP Server Enabled
- **eth1**
 - Status: Enabled for WAN
 - Configure: DHCP (DHCP client)
- **wlan0**
 - Status: Disabled

¹This cable adapter has an end provided with a Male USB connector type A, and the other end provided with a 3-pin, 1.25 pitch, female receptacle housing. Contact Eurotech for further information.

11.3.1 How to login via the eth0 port

ReliaGATE 10-12 eth0 port is configured with the static IP address: 172.16.0.1/24.

To log in using eth0, complete the following steps:

1. Enter the command `ssh root@172.16.0.1`
2. At the prompt, enter the password (see ["The default credentials" on the previous page](#)).

11.3.2 How to login via the eth1 port

ReliaGATE 10-12 eth1 port is configured in DHCP client mode.

You have to know its IP address before you can log in, or you have to use a zeroconf implementation.

NOTICE

By default the ReliaGATE 10-12 runs a zeroconf implementation.

You can detect the IP address of the unit remotely by running the command: `avahi-discover`.

Example:

1. Run the command: `avahi-discover`. A dialog box pops-up reporting all the devices on your network that support this mechanism
2. Under "eth0 IPv4" > "local" > "Workstation", you should see your product's hostname (example: `productname_serialnumber`). Select it to see its IP address
3. Log in your Reliagate using: `ssh root@productname_serialnumber.local`
4. At the prompt, enter the password: (see ["The default credentials" on the previous page](#)).

11.4 How to change your security settings

For security reasons, Eurotech recommends you to change the Linux 'root' password after your initial setup.

To change your Linux password, complete the following steps:

1. Login using the console port
2. Run the `passwd` command and enter a new 'root' account password

12 HOW TO COMPILE CUSTOM SOFTWARE FOR THE RELIAGATE 10-12

12.1 How to set up the toolchain

1. Make sure you're using the correct toolchain version corresponding to the Yocto image installed on your gateway.

The latest toolchain and Yocto image for your ReliaGATE 10-12 are available here:

<https://eurotech.github.io/linux-releases/>

2. Download the binary file (x86_64 version tested) on a Virtual/physical machine running Ubuntu (14.04 tested), execute it and select appropriate installation options
3. Once the installation is complete, switch to superuser (`sudo su`)
4. To setup the correct environment variables, run:

```
source /opt/poky/2.3.2/environment-setup-cortexa8hf-neon-poky-linux-gnueabi
cd /opt/poky/2.3.2/sysroots/cortexa8hf-neon-poky-linux-gnueabi/usr/kernel
make scripts
```

5. Exit superuser mode

12.2 How to use the toolchain to compile custom software for the ReliaGATE 10-12

1. Setup the environment variables using:

```
source /opt/poky/2.3.2/environment-setup-cortexa8hf-neon-poky-linux-gnueabi
```

2. To directly compile a user-space C source file `hello_world.c`, use

```
$CC hello_world.c
```

3. To compile a kernel module `kernel_module.c`, configure your Makefile to point to the kernel directory and include the `.config` file in the kernel directory. Here's an example of Makefile:

```
KBLD := /opt/poky/2.3.2/sysroots/cortexa8hf-neon-poky-linux-gnueabi/usr/kernel -
include $(KBLD)/.config
obj-m :=kernel_module.o
all : modules
modules clean :
$(MAKE) -C $(KBLD) M=$(PWD) $@
```

(This page has been intentionally left blank)

Preliminary

13 EUROTECH EVERYWARE IoT

Eurotech Everyware IoT is a combination of hardware, firmware, operating systems, programming frameworks, and cloud platforms. It enables you to layer you added-value components on a reliable ready-to-use infrastructure, dramatically accelerating the time to market of your IoT projects.

13.1 Everyware Software Framework (ESF)

Everyware Software Framework (ESF) Edge Computing Platform is a high-level, multi-platform and flexible application development environment.

ESF is a smart application container that enables remote management of IoT gateways and provides a wide range of APIs allowing you to write and deploy your own IoT application.

ESF allows the connection and communication with field devices (close to data sources), thanks to already tested libraries for field protocol communication, the visual IoT Edge Computing applications development and the connection with leading IoT Cloud Services such as Everyware Cloud (Eurotech IoT Integration Platform), Eclipse Kapua, AWS IoT and Microsoft Azure IoT.

ESF runs on top of the Java Virtual Machine (JVM) and leverages OSGi (a dynamic component system for Java) to simplify the process of writing reusable software building blocks.

ESF APIs offer:

- easy access to the underlying hardware including: serial ports, positioning, watchdog, USB, GPIOs, I2C, etc.
- OSGi bundles to simplify the management of network configurations, the communication with IoT servers, and the remote management of the gateway.

ESF is based on Kura, the popular Eclipse open source project that was originally contributed to the Eclipse community by Eurotech.

13.2 The ESF Web UI

ESF provides a web-based user interface: **ESF Web UI**.

The ESF Web UI provides several functionalities such as:

- Monitor the gateway status
- Manage the network configuration
- Oversee the installed application(s) and services.

The ESF Web UI is available on port 80 of the gateway IP.

The default user is: *admin*

The default password is: *admin*.

The following picture shows an example of the ESF Web UI:

The screenshot displays the ESF Web UI interface. On the left is a sidebar menu with sections: **System** (Status, Device, Network, Firewall, Cloud Services, Drivers and Assets, Wires, Packages, Settings) and **Services** (Simple Artemis MQTT Broker, ActiveMQ Artemis Broker, ClockService, DeploymentService, CommandService, WebConsole, DiagnosticsService). The main content area is titled **Status** and includes a **Refresh** button. It contains two tables: **Cloud Services** and **Ethernet Settings**.

Cloud Services	
Connection Name	org.eclipse.kura.cloud.CloudService
Service Status	CONNECTED
Auto-connect	ON (Retry Interval is 60s)
Broker URL	ssl://broker-sandbox.everyware-cloud.com:8883
Account	[REDACTED]
Username	[REDACTED]
Client ID	[REDACTED]

Wireless Settings	
wlan0	Subnet Mask: Mode: LAN IP Acquisition: DHCP Router Mode: Wireless Mode: Station Mode SSID: ET-CMD-WIFI01

Ethernet Settings	
eth1	192.168.3.136 Subnet Mask: 255.255.255.0 Mode: WAN IP Acquisition: DHCP Router Mode:
eth0	172.16.0.1 Subnet Mask: 255.255.255.0 Mode: LAN IP Acquisition: Manual

13.3 The ESF Wires Application

ESF provides also a dataflow programming model: **Wires**.

Wires simplifies the development of Edge Computing Applications leveraging reusable configurable components.

In the dataflow programming model, the application logic is expressed as a directed graph (flow) where each node can have inputs, outputs and independent processing units.

The processing unit of a node executes independently and does not affect the execution of other nodes. Thus, the nodes are highly reusable and portable.

System

- Status
- Device
- Network
- Firewall
- Cloud Services
- Drivers and Assets
- Wires**
- Packages
- Settings

Services

Search +

- Simple Artemis MQTT Broker
- ActiveMQ Artemis Broker
- ClockService
- DeploymentService
- CommandService
- WebConsole
- DiagnosticsService
- H2DbService
- PositionService
- ProvisioningService
- RebootService
- RestService
- TerminalClientService

Wire Graph

Apply * Zoom In Zoom Out Delete Component Delete Graph

Wire Components

- Timer
- Subscriber
- Logger
- Publisher
- H2 DB Store
- H2 DB Filter
- HSQL DB Store (Deprecated)
- RegexFilter
- Fifo
- Asset
- HSQL DB Filter (Deprecated)

Channels (modbusDriver)

New Channel Delete Channel

name	type	value type	unitId	primary.table	memory.address	data.ori
Temperature	READ	INTEGER	1	INPUT_REGISTERS	1000	MSW
Humidity	READ	INTEGER	1	INPUT_REGISTERS	1500	MSW
Pressure	READ	INTEGER	1	INPUT_REGISTERS	2000	MSW

13.4 Everyware Cloud (EC)

Eurotech's Everyware™ Cloud (EC) is an IoT Integration Platform that simplifies system and data management by connecting distributed devices over secure and reliable cloud services.

Everyware Cloud allows you to connect, configure and manage devices through all the lifecycle, from deployment through maintenance to retirement.

With EC you can:

- Connect any sensor, device or asset to the platform to quickly create new IoT scenarios
- Dynamically and remotely create and add new services and functions to your field devices
- Configure the platform to analyze data in real-time and trigger immediate alerts
- Leverage a device-specific message-oriented infrastructure for fast and easy creation of reliable, device-independent IoT applications
- Integrate MVNO Connectivity Platforms to have a single point of management of Connected Devices and associated SIM cards
- Enable IoT Analytics through built-in connectors to on-line Dashboards and Analytical Reports
- Enable IoT Business Application Integrations through native REST APIs

13.5 For further information

For further information and tutorials about ESF and EC, refer to the following links:


Information	Available at
ESF Website	esf.eurotech.com
ESF Download	www.eurotech.com/download/en/pb.aspx?pg=ESF (click the <i>Developer Environment</i> tab)
EC Integration Platform	www.eurotech.com/en/products/software+services/everyware+cloud+m2m+platform
EC Developer's Guide	everywarecloud.eurotech.com/doc/ECDevGuide/
Kura Website	eclipse.org/kura/

14 MECHANICAL SPECIFICATIONS

14.1 Product mechanical dimensions


The product electronics are housed in an ABS enclosure having the following dimensions: 139 (L) x 115 (W) x 46 (H); mm - Antennas Connectors and Mounting Bracket included.

All dimensions are in millimeters.

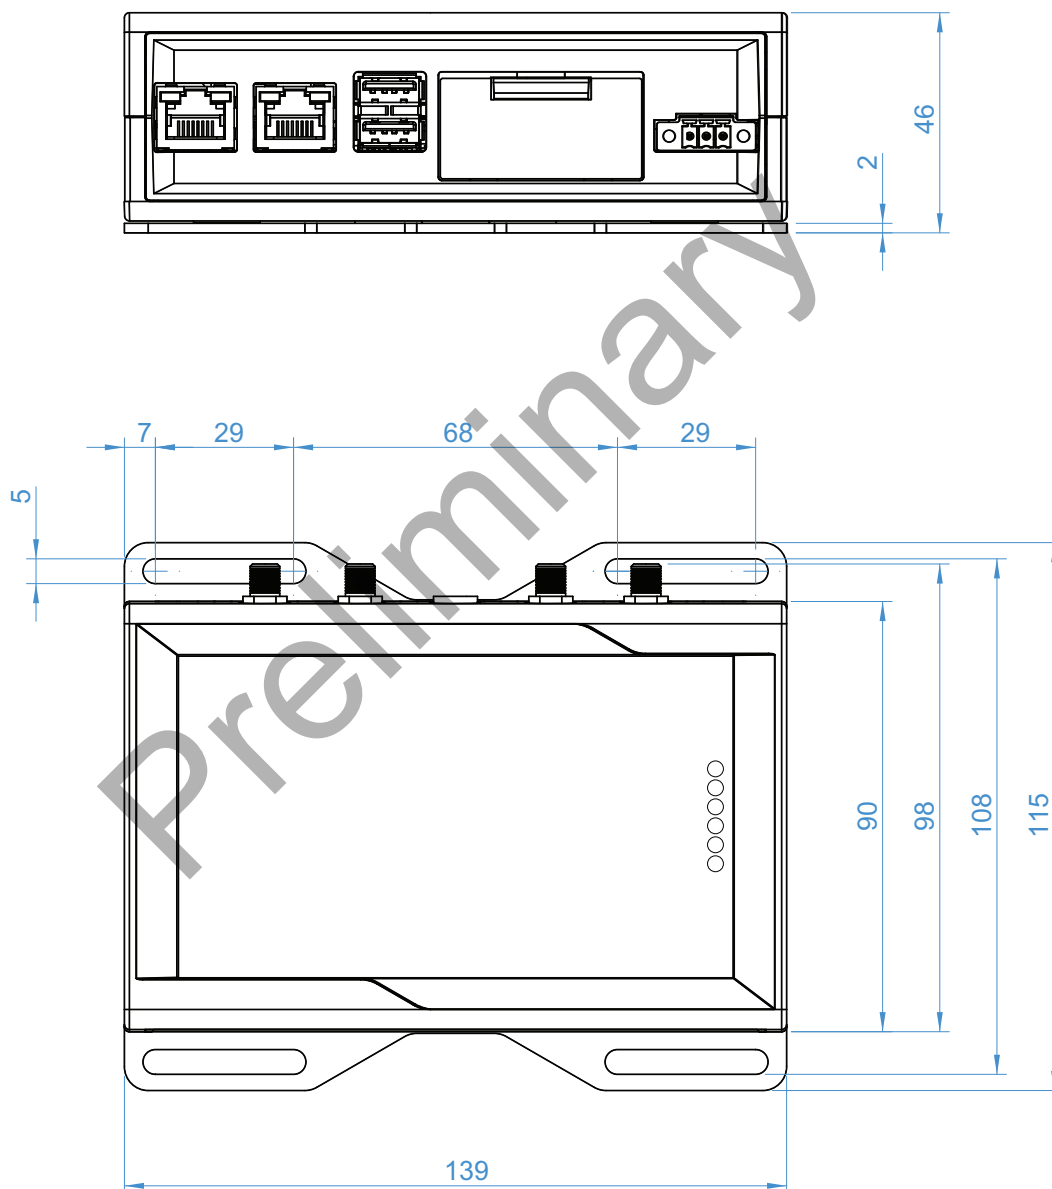

14.2 Mounting Bracket mechanical dimensions

The following figure shows the dimensions of the Mounting Bracket installed on the bottom side of the ReliaGATE 10-12. All dimensions are in millimeters.

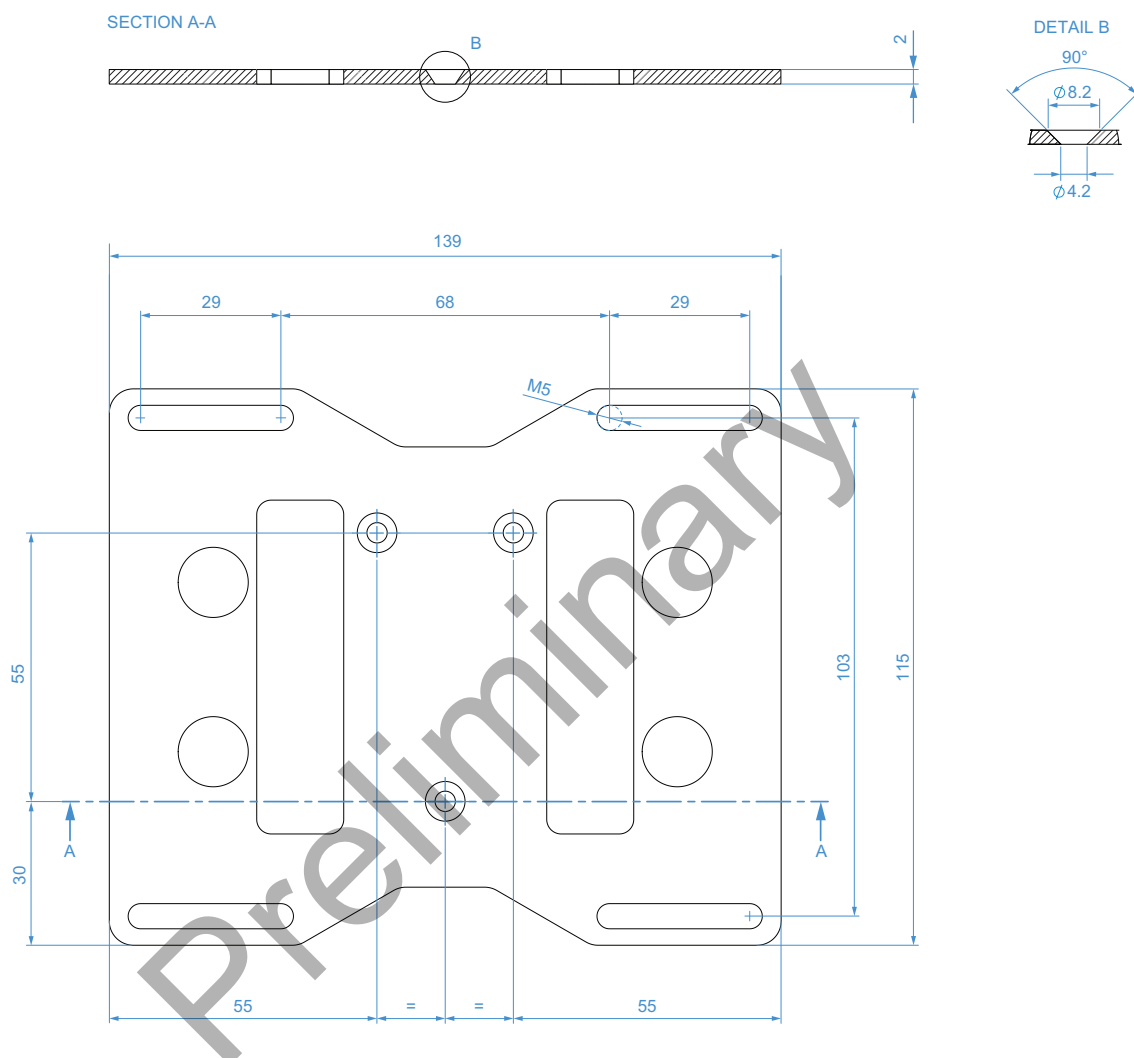

15 HOW TO INSTALL THE PRODUCT

15.1 Comply with the safety instructions


Always comply with the information and instructions contained in the following sections:

- ["Safety instructions" on page 7](#)
- ["Electromagnetic Compatibility" on page 22](#)

15.2 How to install the product using the Mounting Bracket

To install the product in place, add all the necessary mounting hardware to safely secure the product in place according to your installation requirements (for example use M5 screws).


To simplify the installation, the ReliaGATE 10-12 is already provided with a Mounting Bracket. For further information see ["Mechanical specifications" on page 77](#)

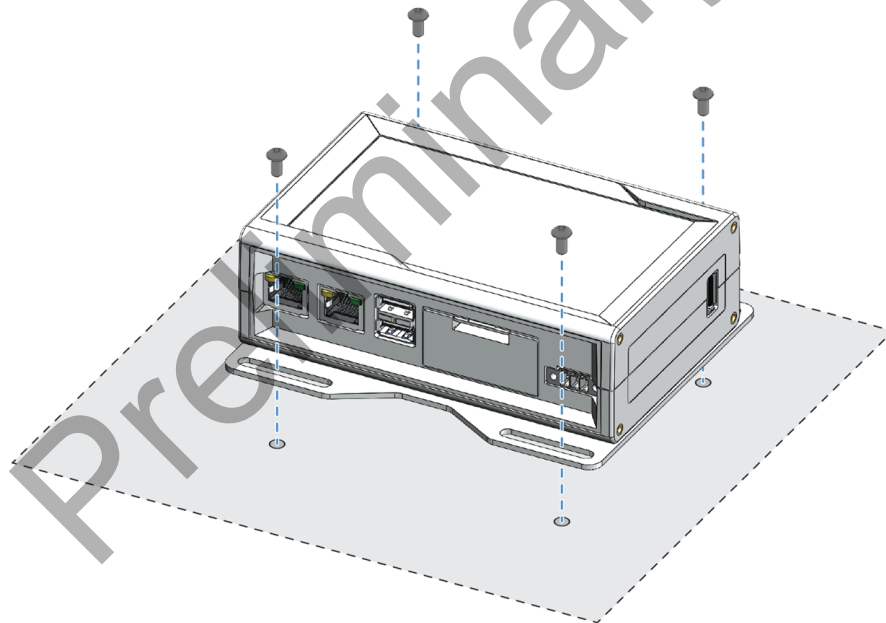

15.3 How to replace the Mounting Bracket with the DIN Rail Mounting Kit

To replace the Mounting Bracket with the DIN Rail Mounting Kit on the product, complete the following steps:


1. Remove the 3 screws that hold the Mounting Bracket in place
2. Remove the Mounting Bracket and the 3 spacers (H = 4mm; Ext. diam. = 14mm; Int. diam. = 7mm)
3. Place the DIN Rail Mounting Kit
4. Fasten the 3 screws removed at Step 1 to hold the DIN Rail Mounting Kit in place

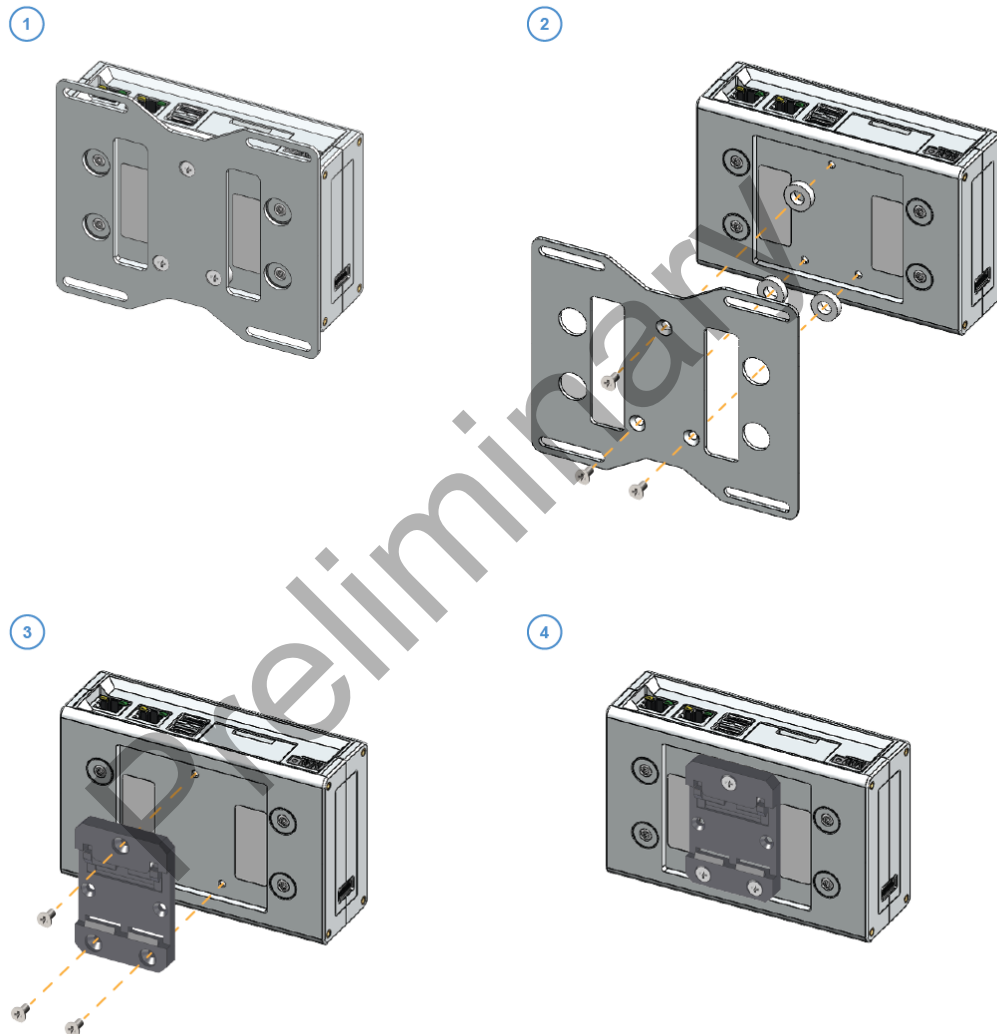

15.4 How to replace the DIN Rail Mounting Kit with the Mounting Bracket

To replace the DIN Rail Mounting Kit with the Mounting Bracket on the product, complete the following steps:

1. Remove the 3 screws that hold the DIN Rail Mounting Kit in place
2. Remove the DIN Rail Mounting Kit
3. Place the 3 spacers (H = 4mm; Ext. diam. = 14mm; Int. diam. = 7mm) and the Mounting Bracket
4. Fasten the 3 screws removed at Step 1 to hold the Mounting Bracket in place

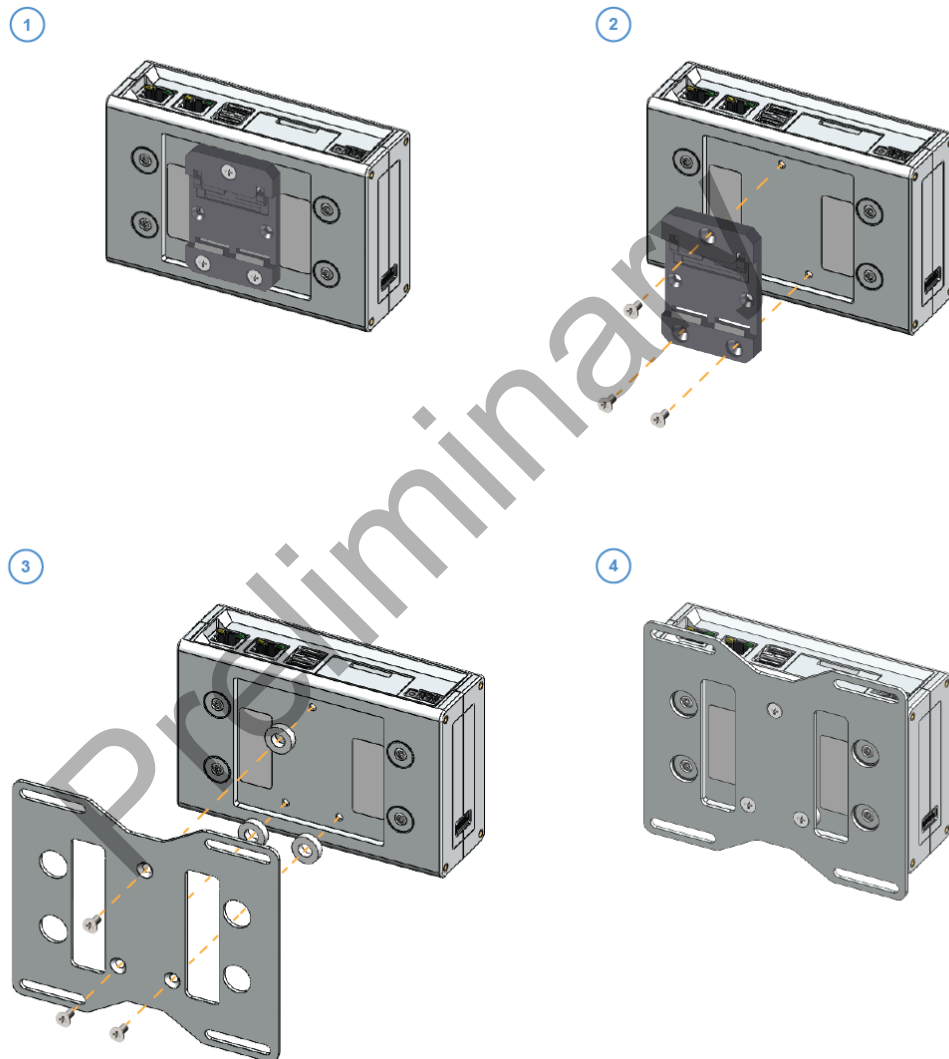


15.5 How to install the product on a DIN rail

Prerequisite: Replace the Mounting Bracket with the DIN Rail Mounting Kit

To install the product on a horizontal DIN rail, complete the following steps:


1. Hook the upper mobile latches of the DIN Rail Mounting Kit on the upper edge of the din rail
2. Push the product against the DIN rail. The lower latches of the DIN Rail Mounting Kit are locked on the din rail.

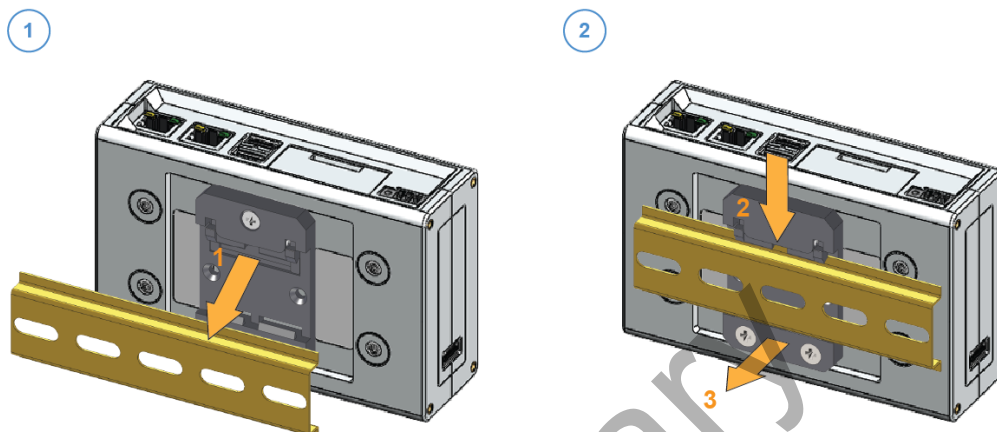

15.6 How to remove the product from a DIN rail

To remove the product from a horizontal DIN rail, complete the following steps:


1. Push downwards the upper mobile latches of the DIN Rail Mounting Kit. The lower latches are released from the DIN rail
2. Pull the product out

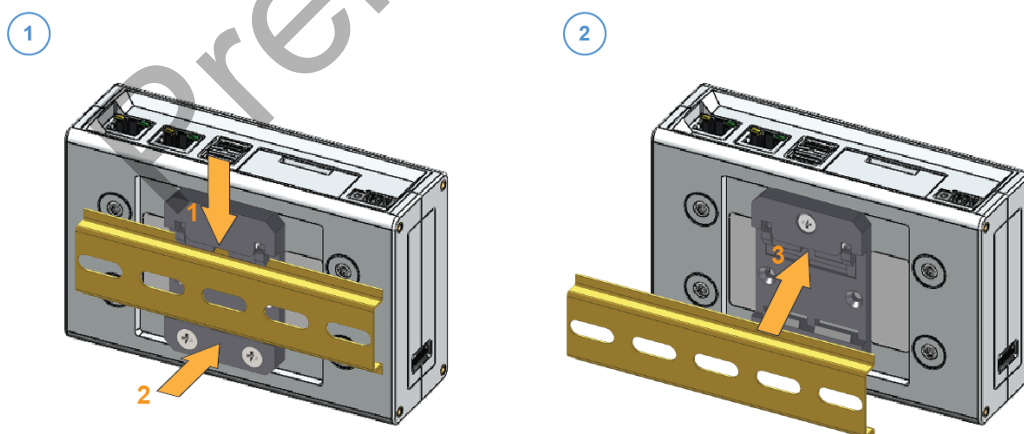

15.7 Which screws are used with the Mounting Bracket or the DIN Mounting Kit

The 3 screws that hold in place the Mounting Bracket or the DIN mounting kit have the following features:

- Phillips type H cross flat countersunk head screw KA35x12
- Fully threaded
- Stainless steel
- Example of Manufacturer and Part Number: Bossard BN 13580 2000997

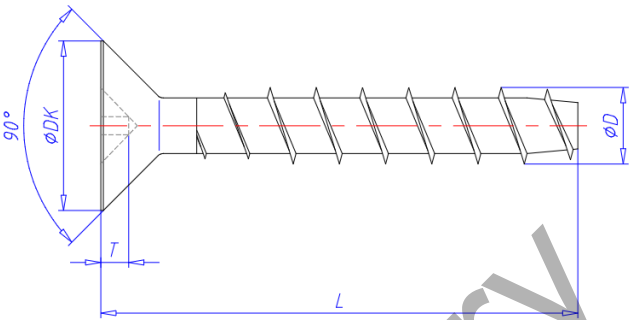

Reference	Value (mm)
ØDK	7.3
T	1.3
L	12
ØD	3.5

(This page has been intentionally left blank)

Preliminary

16 HOW TO MAINTAIN THE PRODUCT

Periodically inspect the product to verify its integrity and to ensure proper operation.

Before starting the product maintenance, complete the following steps:

1. Carefully read and understand the instructions contained in the section "**Safety instructions**" on page 7
2. Prevent electrostatic discharge
3. Remove the power supply

16.1 How to prevent electrostatic discharge

NOTICE



HOW TO PREVENT DAMAGING ELECTROSTATIC-SENSITIVE DEVICES

The symbol on the left is applied on electrostatic-sensitive devices.

To prevent damaging electrostatic-sensitive devices:

- Handle the electrostatic-sensitive devices in an ESD Protected Area (EPA)
- Observe the appropriate antistatic precautions. For example: use a wrist strap kept in constant contact with bare skin and attached to ground.

16.2 How to safely remove the power supply

To safely remove the power supply from the product, complete the following steps:

1. ALWAYS make sure your hands are dry before performing any cables disconnection
2. ALWAYS remove all the power supply sources
3. ALWAYS disconnect all the cables
4. ALWAYS make sure that all the circuits are discharged

Failure to follow the steps above, may create an electric shock hazard, which could result in personal injury or loss of life, and / or damage to equipment or other property

16.3 How to verify the installation of the product

To verify the installation of the product, complete the following steps:

1. Verify that the product is clean and not damaged
2. Verify that the LED indicators are visible and not damaged
3. Verify that all the screws, bolts, nuts are correctly fastened
4. Verify that the product is installed correctly.

16.4 How to clean the product

To clean the product, complete the following steps:

1. Never use detergents, aerosol sprays, solvents or abrasive sponges
2. To remove dust from the case of the product, use a dry, lint-free, cloth
3. To remove the dirt, use water-based, non-flammable, cleaner products.

(This page has been intentionally left blank)

Preliminary

NOTES

Preliminary



EUROTECH.COM

HEADQUARTERS

Via Fratelli Solari, 3/a
33020 Amaro (UD) - Italy
Tel: +39 0433.485.411
Fax: +39 0433.485.499
Email: welcome@eurotech.com
Web: www.eurotech.com

For your Eurotech local contact refer to:

eurotech.com/contacts

For the Eurotech Global Support Centre refer to:

support.eurotech.com

For the Eurotech Download Area refer to:

eurotech.com/download

Preliminary